



*Lyfco*<sup>®</sup>

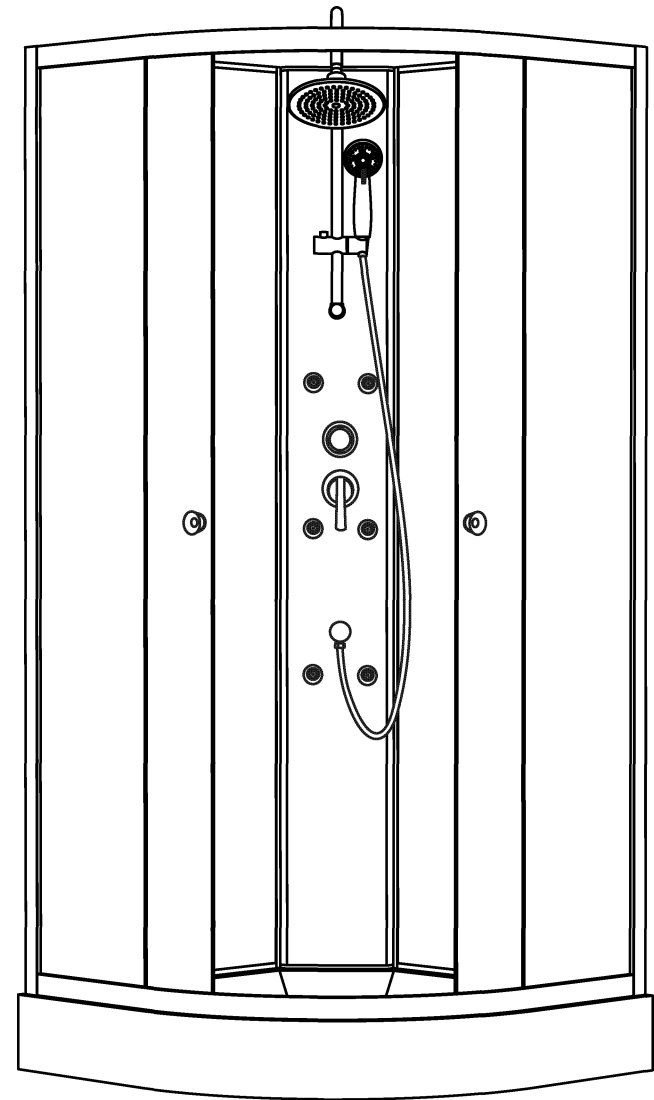

Manual för modellerna  
AR-826B-80  
AR-826B-90

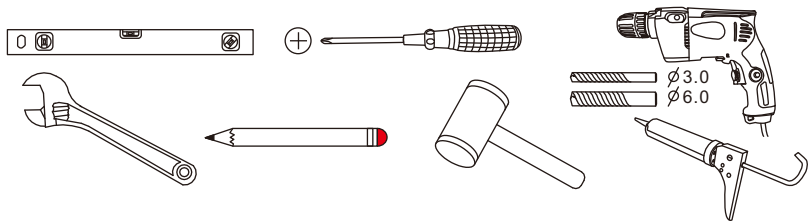

A		X2	H		X1	O		X16
B		X2	I		X4	P		X4
C		X2	J		X4	Q		X6
D		X2	K		X4	R		
E		X2	L		X2	S		
F		X1	M		X1	T		
G		X4	N		X8	U		

