


# Allswing door hinges

Height adjustment up


1. Lift the door leaf or sash a few mm to release the weight from the hinge pins

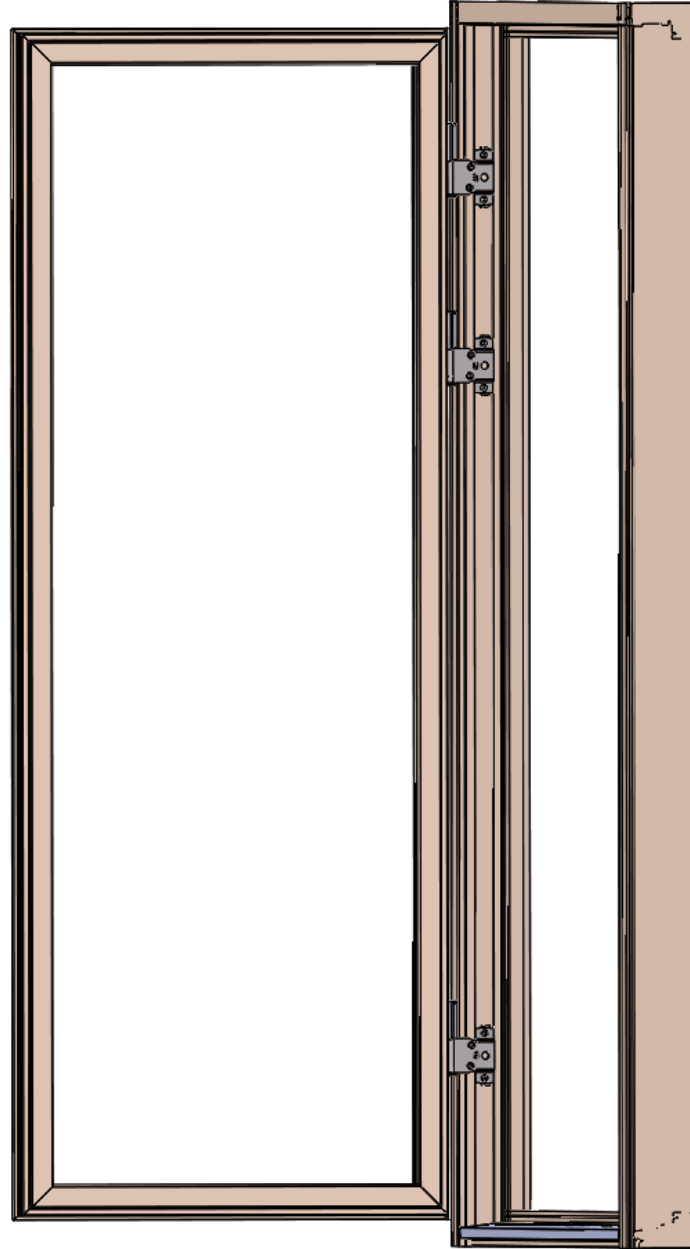

2. Adjust with the screw (torx 15) in the bottom of the frame leaf clockwise on all hinges.

3. Lower the door leaf

4. Test the function.  
If necessary, repeat step 1-3 again.

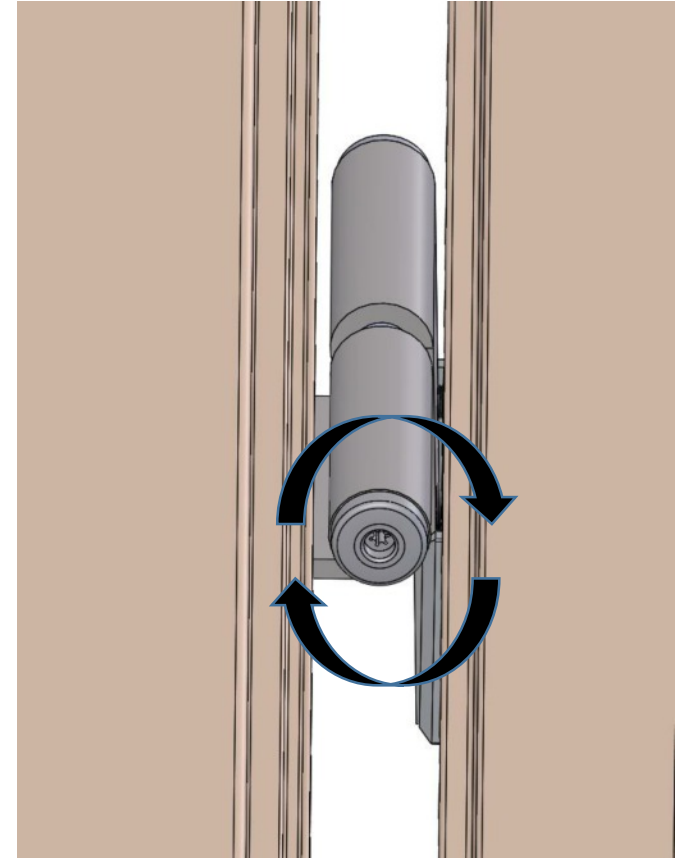


# Allswing door hinges

## Height adjustment down

1.  
Adjust with the screw (torx 15) in the bottom of the frame leaf counterclockwise on all hinges. The door leaf should sink.

2.  
Test the function.  
If necessary, repeat step 1 again.

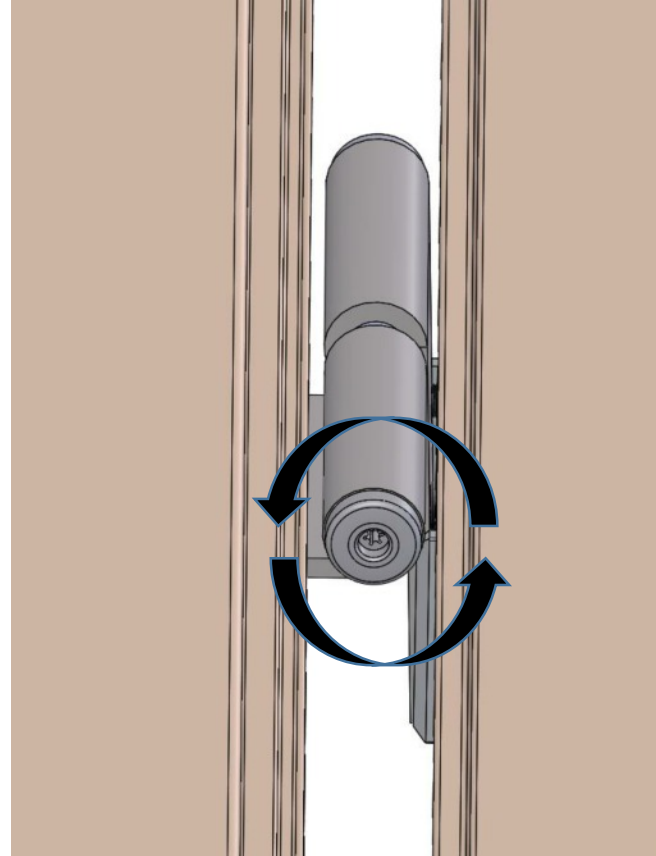

# Allswing door hinges

## Side adjustment

1.  
Loosen the three marked screws. NOTE not more than three turns. 1 screw (Torx 20) and 2 screws (PZ2)
2.  
To adjust the door leaf/sash towards the lock side, screw the two socket head screws clockwise (socket head 3mm).  
  
To adjust the door leaf/sash towards the hinge side, screw the two socket head screws counterclockwise.
3.  
Tighten the three marked screws again.
4.  
Test the function.  
If necessary, repeat step 1-3 again.

