


INSTRUCTION MANUAL

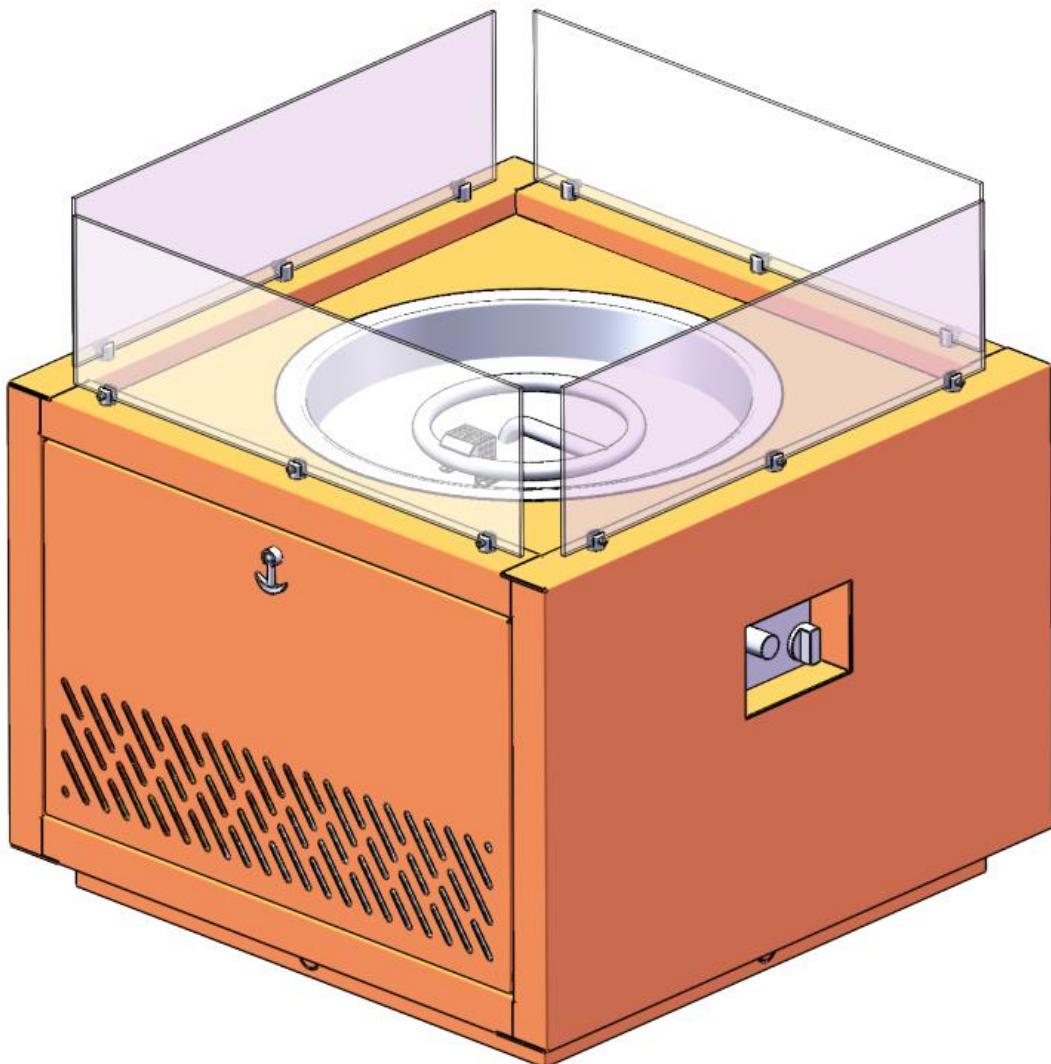

SKU 143-1-28

PART. A.

LIMITATION OF WARRANTY AND LIABILITY

NOTICE: Read this Limitation of Warranty and Liability Before Using This Product. If the Terms Are Not Acceptable, Return the Product at Once, Unopened, and the Purchase Price Will Be Refunded.

1. It is impossible to eliminate all risks associated with the use of this product. Such risks arise from weather conditions, the manner of use or application, or other unknown factors, all of which are beyond the control of the Seller and Manufacturer. These risks can cause bodily injury or death, ineffectiveness of the product, and damage to other property. Seller and Manufacturer do not agree to be an insurer of these risks you agree to accept these risks.
2. Seller and Manufacturer warrant that this product is reasonably fit for the purpose stated in the Owner's Instructions Manual, subject to the inherent risks described above, when used in accordance with the Owner's Instructions Manual under normal conditions. Seller and Manufacturer provide no other express or implied warranty of fitness or of merchantability or any other express or implied warranty.
3. In no event shall Seller or Manufacturer be liable for any incidental, consequential, or special damages resulting from the use or handling of this product. Buyer's or user's bargained-for expectation is for home use of the product in accordance with the Instruction Manual and under normal conditions and that is the exclusive remedy of the user or buyer and the exclusive liability of Manufacturer or Seller, for any and all claims, losses, injuries or damages (including claims based on breach of warranty or contract, negligence, tort or strict liability) resulting from the use or handling of this product, shall be the return of the purchase price of the product or, at the election of Manufacturer or Seller, the replacement of the product.
4. Any claim by buyer or user of this product shall be filed within one (1) year of the date of injury or damage or the claim will be barred. Buyer and user waive any right to file any class action claim for product defect, design defect, or failure to adequately warn of product hazards or safe installation.
5. This Limitation of Warranty and Liability may not be amended by any oral or written agreement.

PART. B.


SAFETY INFORMATION

 WARNING	<p>FOR OUTDOOR USE ONLY !</p> <p>This product shall be used outdoors, in a ventilated space and shall not be used in any enclosed area.</p>
 DANGER	<p>If you smell gas and/or hear a gas hissing sound:</p> <ol style="list-style-type: none">1. Immediately, SHUT OFF gas to the appliance.2. Extinguish ALL open flames.3. If odor continues, keep away from the appliance and immediately call your Gas Supplier or Fire Department.
 DANGER	<p>DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this unit and or any other appliance.</p> <p>An LP Gas tank not connected for use shall not be stored in the vicinity of this or any other appliance.</p>
 DANGER	<p>Improper installation, adjustment, alteration, service or maintenance can cause injury or damage to property.</p> <p>Read and understand the Owner's Manual thoroughly before installing or servicing this Fire Table / Column.</p> <p>If the information in this Owner's Manual is NOT followed exactly, a fire or explosion may result and cause property damage, personal injury or loss of life.</p>
 DANGER	<p>CARBON MONOXIDE HAZARD.</p> <p>This appliance can produce carbon monoxide which is odorless.</p> <p>Using it in an enclosed space can kill you.</p> <p>Never use this appliance in an enclosed space such as inside a camper, tent, car or home.</p>

Note: Save this Manual and these instructions for future use. If you are assembling this unit for someone else, give this Owner's Manual to them to read.

1. This unit is to be used with LP Gas / Propane Gas only! It is NOT intended for Natural Gas. Converting this unit to Natural Gas is dangerous and not recommended. Propane Gas tank is not attached and not delivered with this unit.
2. Use LP propane tanks with the following dimensions: diameter 12 in, height 18 in, capacity 20lbs. You must use a Propane Gas Tank that has a collar to protect the Gas Valve. The tank system must be set up for vapor withdrawal. The maximum gas supply pressure is 250psi.
3. DO NOT fill tank over 80% full. Applying too much Propane Gas may result in gas pooling and will NOT burn. Allow fresh air into the unit so that the remaining gas may escape.
4. STOP using if any part of the Propane Gas Tank is damaged. Rust and dents in tank may be hazardous and should be inspected by a Gas Supplier.
5. Do not use any solid fuel or charcoal for this unit. DO NOT burn anything other than the provided materials for this Fire Table.
6. When igniting this unit, exercise caution as some gas pooling from the Burner may cause the flame to flare that could cause injury.
7. DO NOT operate unit until all parts are fully assembled.
8. DO NOT paint or color any part of this Fire Table / Column.
9. Unit may be hot while in use, DO NOT attempt to move it while in use.
10. Never leave this Fire Table / Column unattended while in use.
11. This unit is NOT intended for cooking.
12. Keep all flammable items away and DO NOT use any other fireplace cover for this unit.
13. Keep a safe distance to avoid burning skin or clothing.
14. DO NOT sit or rest hands or feet on this Fire Table / Column. Never place hands or fingers onto upper portion of this unit while in use.
15. Keep all electrical cords and fuel supply hose away from heated surfaces.
16. Combustible material, gasoline and other flammable vapors and liquids should NOT be within 72 inches of the top of the unit, and within 48 inches around the

entire unit. DO NOT store a spare Propane Gas Tank on or near this unit.

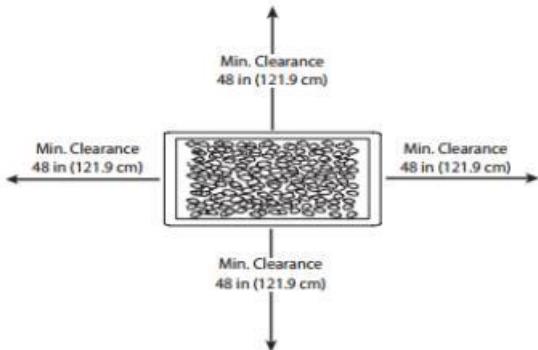


17. DO NOT add water into the unit. DO NOT operate unit if any part has been under water.
18. DO NOT disconnect any part while the unit is in use.
19. DO NOT operate on a boat or vehicle. This unit can only be used on any stationary outdoor flat surface ONLY.
20. This heating appliance should NOT be used on plastic, artificial wood desks or any desk.
21. Children must never operate this Fire Table / Column. Children must be supervised AT ALL TIMES while near this Fire Table / Column.
22. Inspect all elements of this Fire Table / Column before each use. If there is damage, the Burner must be replaced.
23. Check for leaks after not using the unit for long periods of time.
24. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners and circulating airways of the appliance are kept clean.

PART. C.


GLASS ASSEMBLY INSTRUCTIONS

Note: Four pieces identical glass are provided as well as 12 sets of assembly hardware.

1. Screw 12 hardware to top of fire table first.

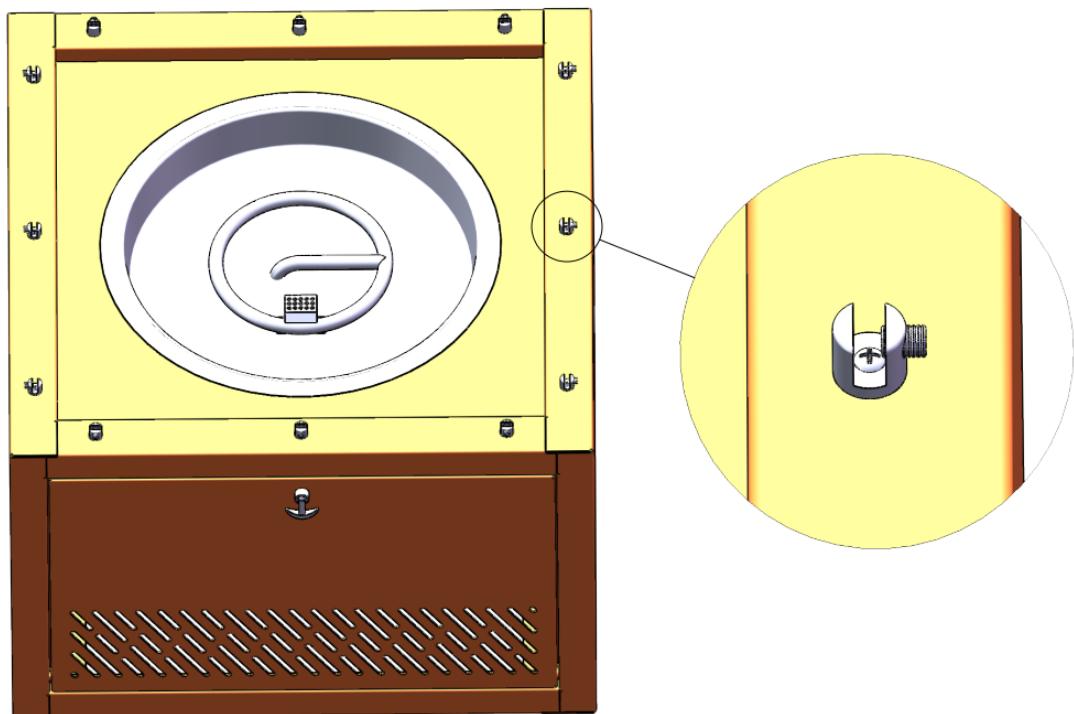

2. Insert glass to U shape hardware and screw horizontally to lock glass in place.

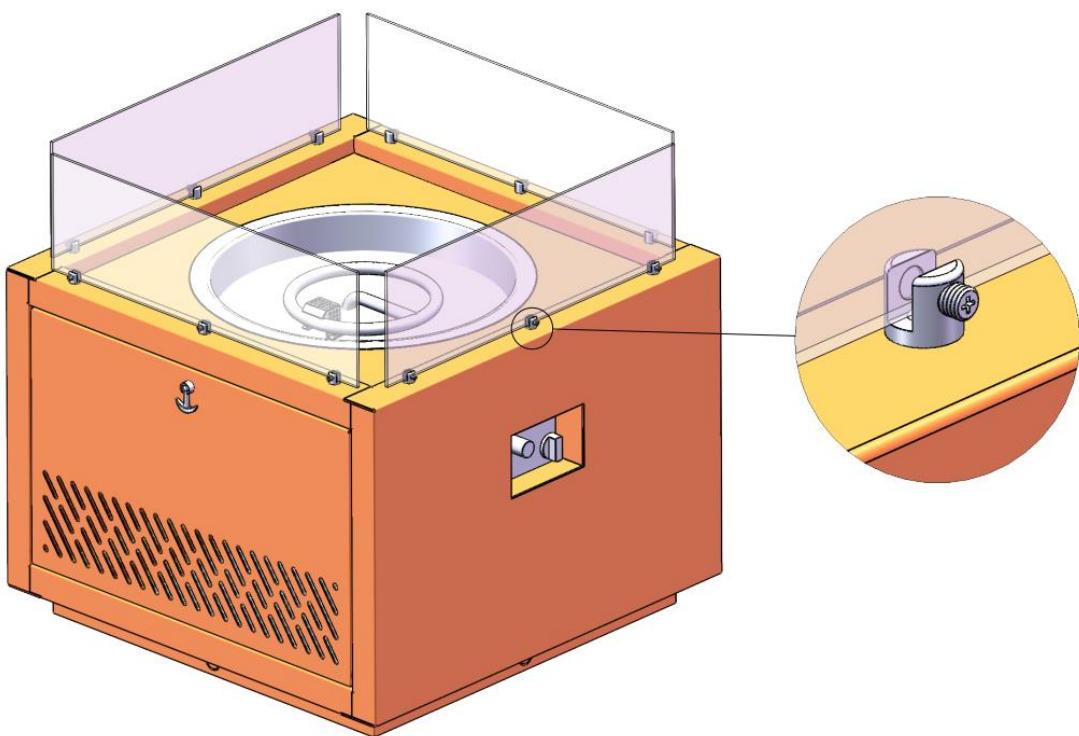

PART. D.

USER'S INSTRUCTIONS



WARNING


The installation of this unit must adhere to local codes or either the National Fuel Gas Code, ANSI Z223.1/NFPA54, OR CAN/CGA-B149.1 and Propane Installation Code.

The fire table is pre-assembled with necessary components for customer's convenience. Please follow below steps to use the fire table correctly.


1. Check that the Control Knob for the gas supply system is turned to the "OFF" position before starting any assembly.




2. Open the door of fire table by turning the handle to right with 90 degree, and put 20 lb. propane gas tank inside .

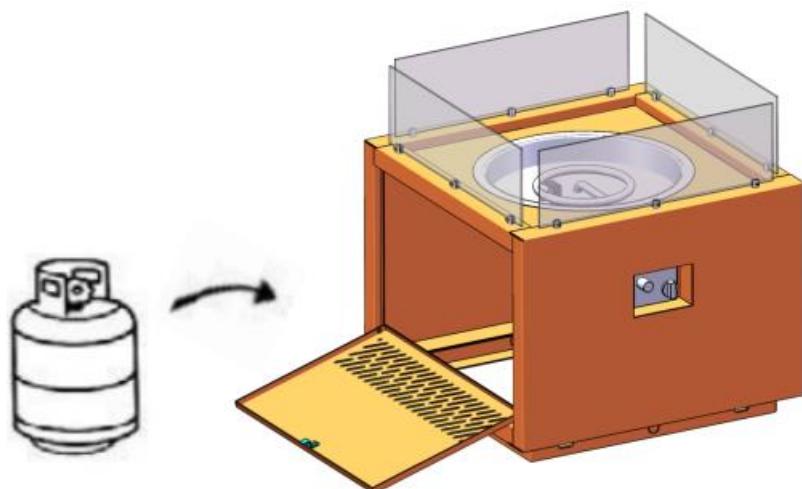


3. Turn the Cylinder Valve on the tank in a clockwise direction to TURN OFF SUPPLY of the LP Gas supply . Attach the preassembled Regulator from the Fire Table / Column to the Cylinder Valve by turning the Black Regulator Coupling Nut clockwise. Make sure it is fastened securely and tighten connections - by HAND only.

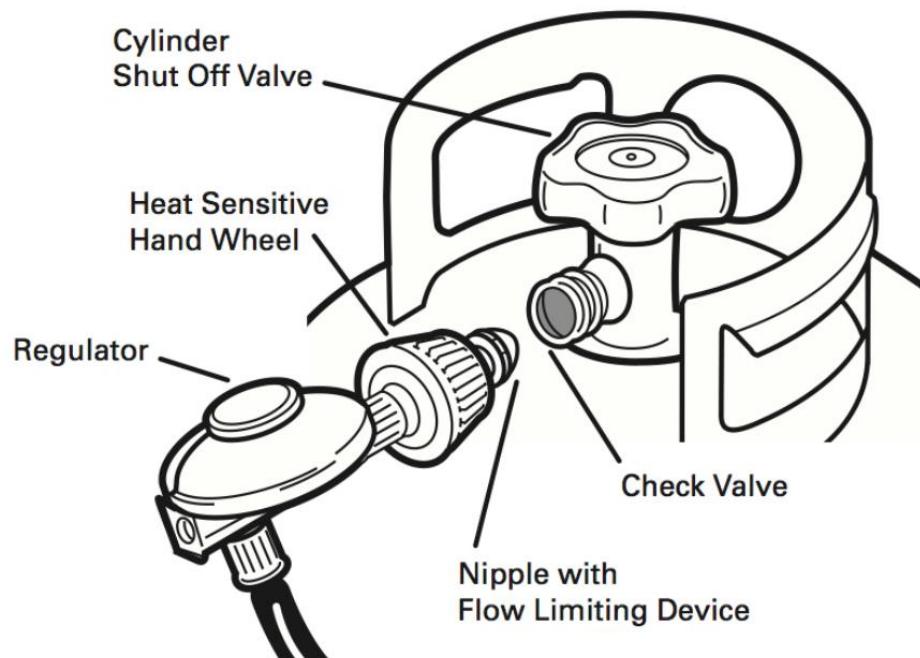

4. Close the door back to the Mainframe of the Fire Table / Column and turn handle in opposite way to lock door in position.

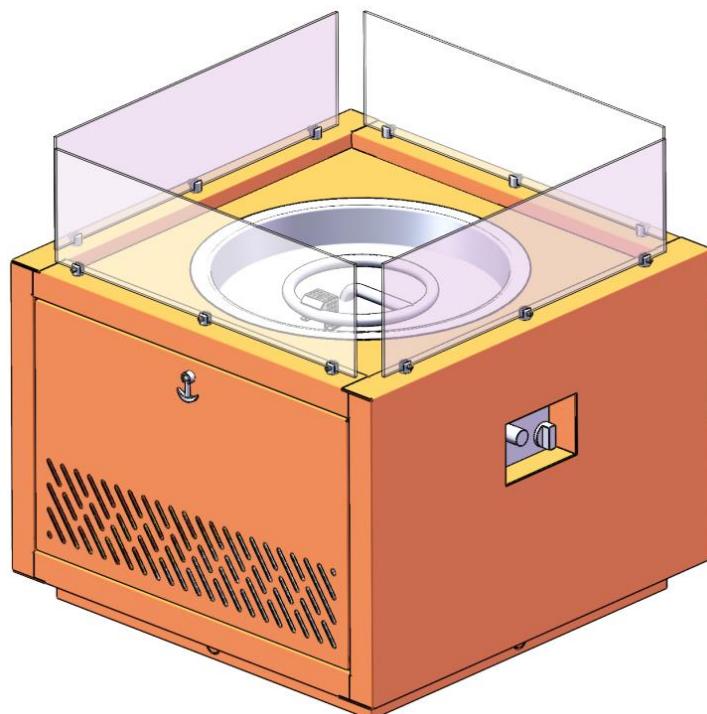


5. Remove the electronic ignitor cap on operation tablet by unscrewing and slide AAA battery (not provided) into battery slot. Make sure the positive side of battery faces outwards. Screw the electronic ignitor cap over battery tightly.

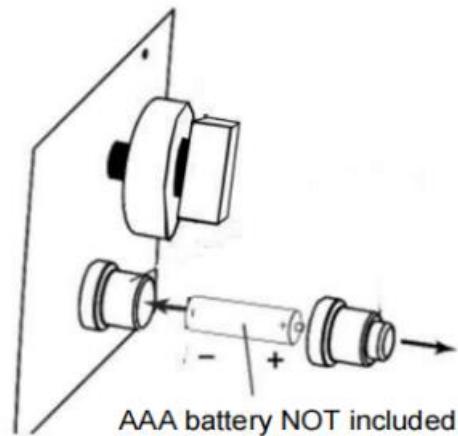


6. Subject to your preference, you may pour Lava Rocks / Pumice stones over the Burner Ring. The Guard MUST NOT BE BLOCKED.

Refer to guidance below :

- Do not place more than 1/4 inch depth of lava rocks above the burner holes. Excessive use of lava rocks / pumice stones, will suffocate the flame.
- Always ensure that lava rocks / pumice stones are completely dry before use. Failure to do so will cause them to crack or pop.
- Keep away from the unit for the first 20 minutes after igniting your unit for the first time, as lava rocks / pumice stones could pop out and cause injury. Should any rocks pop out, discard them.

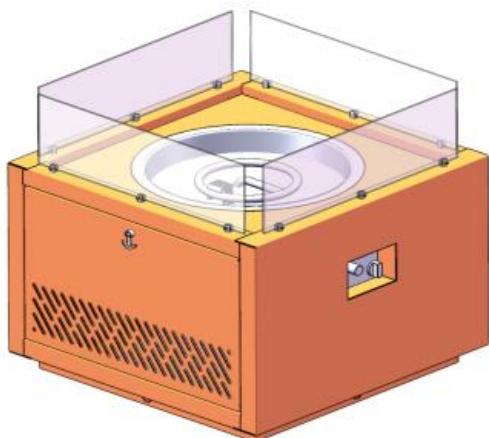

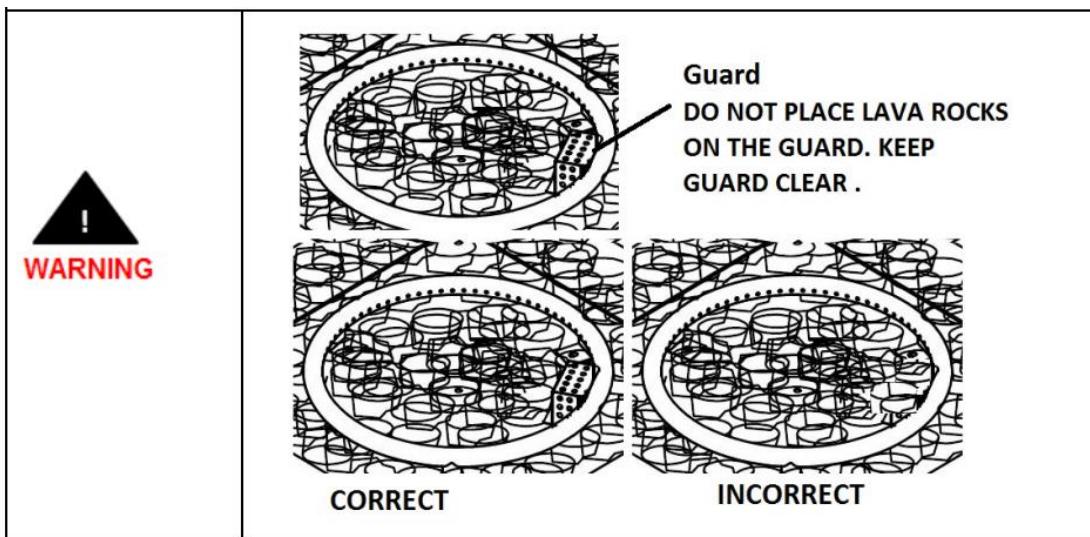

PART. E.

LEAK TEST

Warning:

Perform all leak tests outdoors. Extinguish all open flames. NEVER leak test when smoking. Do not use the fire pit until all connections have been leak tested and do not leak.

How to test:

Connect the Propane Gas tank to the Regulator and turn the Valve on the unit to the "OFF"position. Check for Leaks by brushing some soap and water mixture on all connections. Turn the gas supply on.

If extra large bubbles form on any connection there may be a leak. If you smell gas or a leak is discovered, IMMEDIATELY turn the gas valve off.

If leak is at hose regulator connection tighten connection and perform another leak test. If bubbles continue appearing the hose should be returned to the place of purchase.


If leak is at regulator cylinder valve connection, reconnect and perform another leak test. If you continue to see bubbles after several attempts, cylinder valve is defective and should be returned to cylinder place of purchase.

If NO bubbles appear at any connection, the connections are secure.

NOTE: Whenever gas connections are loosened or removed, you must perform a complete leak test.

PART. F. IGNITION

1. Read instructions before lighting. Control knob must be in "OFF" position.
2. Push and turn control knob to "Low".
3. Keep pressing ignitor to light the burner, release control knob after 15 seconds, if burner does not light, push and turn control knob to "OFF", wait 5 minutes then repeat lighting procedure. If igniter does not light burner, use a long match or a long butane lighter.
4. Adjust flame to desired flame with turning the control knob between the "LOW" and "HIGH" positions.

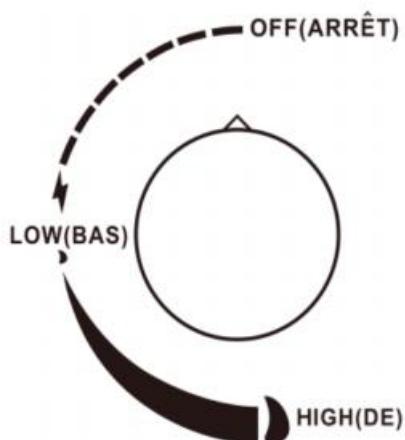

5. Observe flame height when lit:
 - Flame color should be yellow / blue.
 - Flame height burns at 2 - 10 inches high.



6. Turning off:
 - Turn and push control knob to "OFF" position.
 - Turn the gas cylinder valve clockwise to close.
7. When everything is correctly connected, but fire table / column does not light up, check if the battery is inserted in correct direction OR battery needs to be replaced. If there is sudden drop in flame even when control knob is in "HIGH" position, check if gas tank is empty.

PART. G.

MAINTENANCE

1. Before performing any maintenance work, ensure the Control Knob is in the "OFF" position and always disconnect Propane Gas tank. Allow all parts to cool down completely before you clean the product.
2. Keep your fire pit out of the rain and store it in a dry place, stored away from direct sunlight.
3. Keep the Fire Table / Column free and clear from all combustible materials.
4. If storing this unit inside, disconnect the Propane Gas tank from the Gas Valve . Leave the gas tank outside of your premises.
5. Use a soft brush to get rid of the mild stains, loose dirt and soil after the burner and pumice stones / lava rocks are completely cooled down. Wipe down with a soft cloth.
6. Not using manufacturer approved or supplied parts/accessories may result in a defective condition and shall void the warranty of this Fire Table / Column.