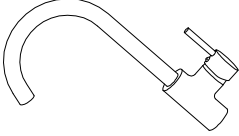


 

 

 
 
 
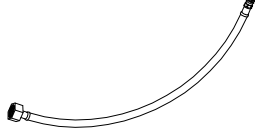



 
 
 

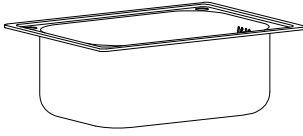


 

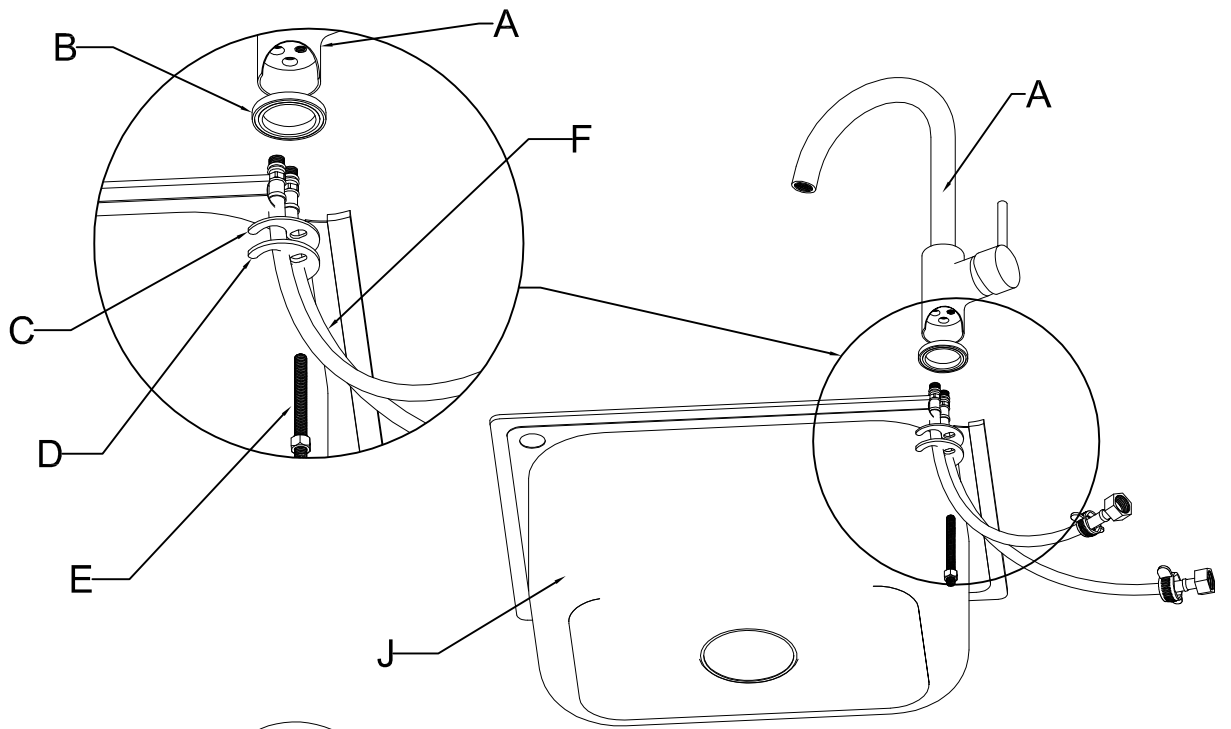
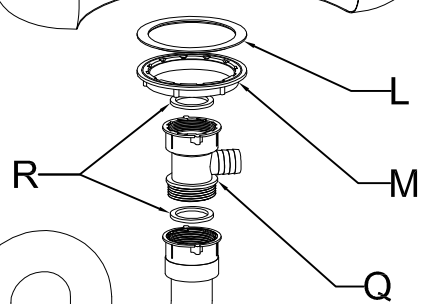
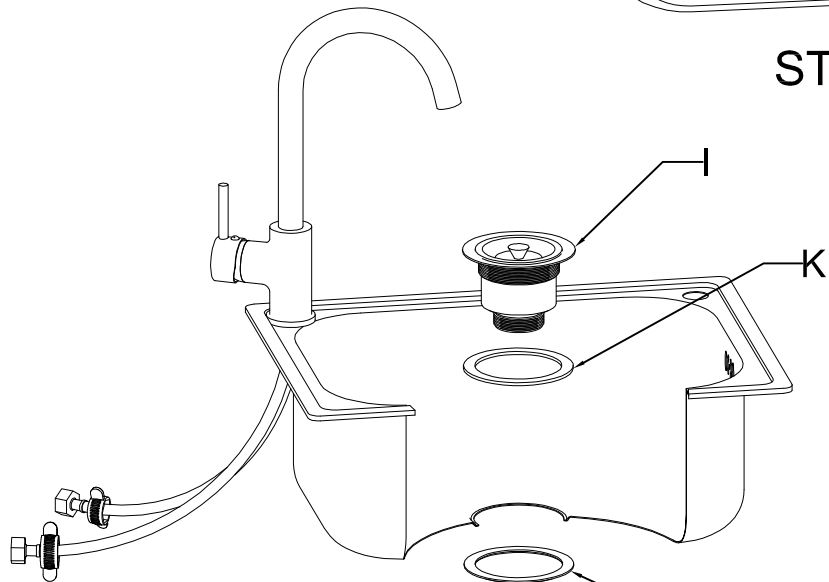


ASSEMBLY INSTRUCTION

NO.:	Part List	Qty	NO.:	Part List	Qty
A		1	M		1
B		1	N		1
C		1	O		1
D		1	P		1
E		1	Q		1
F		2	R		2
G		2	S		1
H		2	T		1
I		1	U		1
J		1	V		1
K		1			1
L		1		used inside the Angle valve for sealing	



STEP1



STEP2

