


MANUAL PLASTVÄXTHUS PV-116



Komponentlista

1 x 3 st		2 x 6 st	
3 x 6 st			
4 x 24 st			
5 x 22 st			
6 x 15 st			
7 x 18 st			
A x 6 st		8 x 10 st	
B x 8 st			
C x 4 st		9 x 1 st	
D x 8 st			
E x 4 st		10 x 6 st	
F x 4 st		11 x 6 st	
G x 8 st		12 x 1 st	
		13 x 1 st	

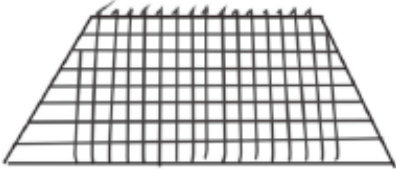