
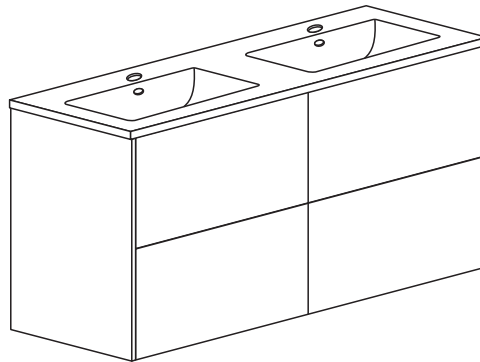
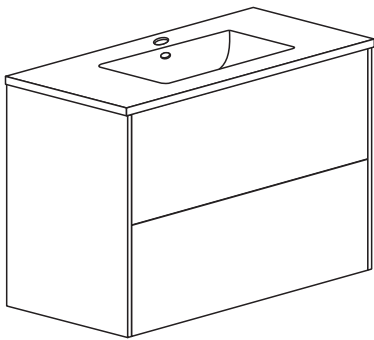
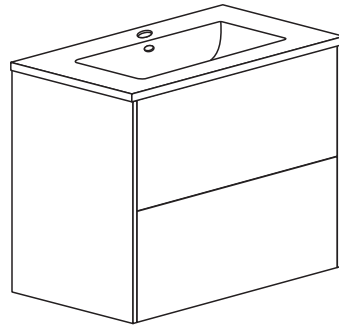


# MOTL60/MOTL80/MOTL100/MOTL120D

## INSTALL INSTRUCTION

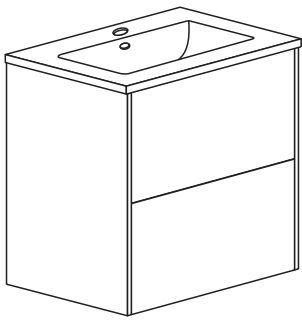


SIZE:600\*460\*560MM  
SIZE:800\*460\*560MM  
SIZE:1000\*460\*560MM  
SIZE:1200\*460\*560MM


## TOOLS REQUIRED

when you're ready to start. Make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake installation.

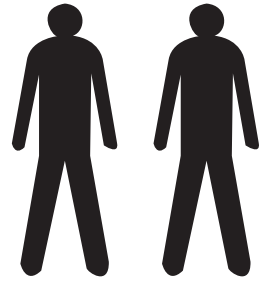


Drill bit head 10mm

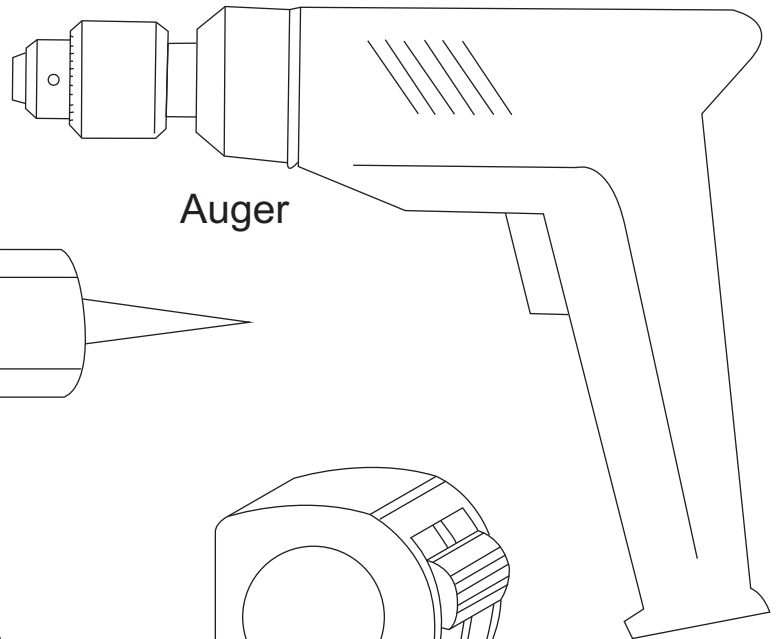


Auger

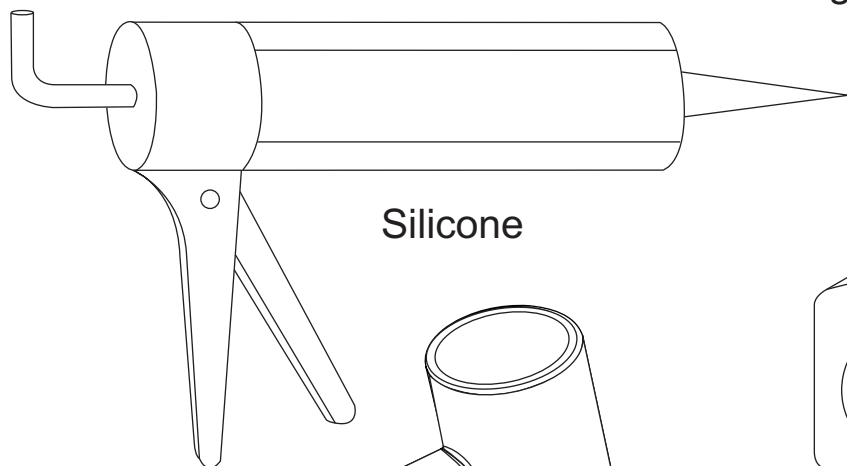


Silicone

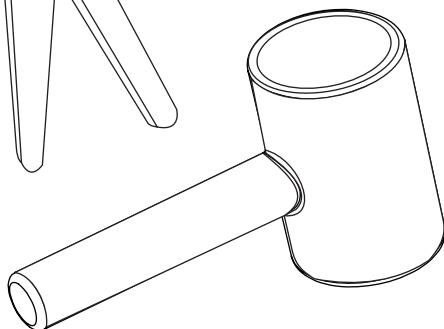


Rubber Mallet

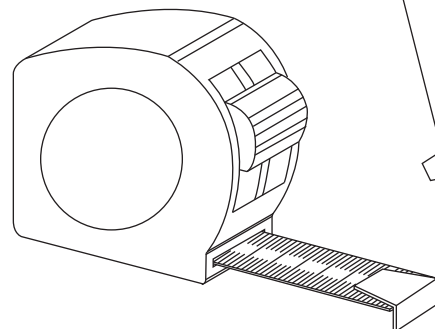


Tape measure





Pencil




Magnetic crosshead screwdriver

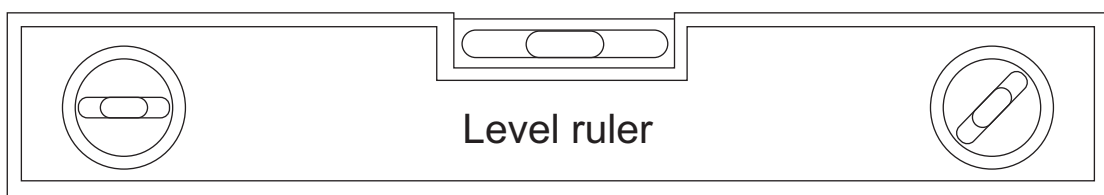

Level ruler

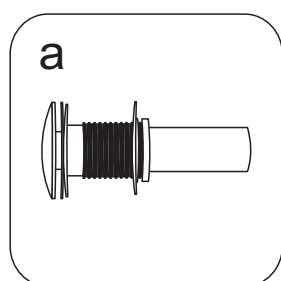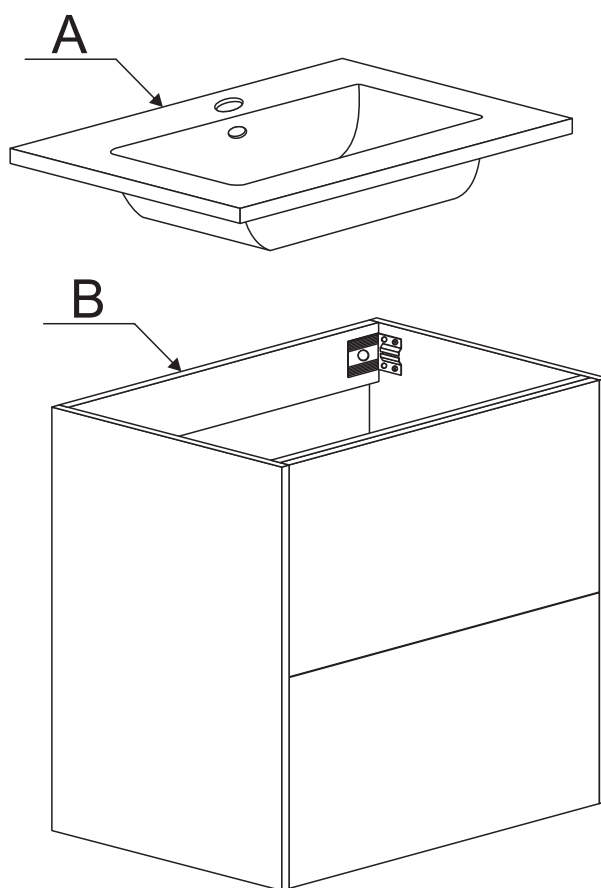


PCS1

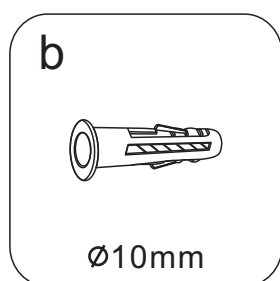


Ø10mm

PCS4

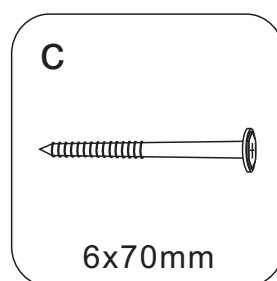


6x70mm

PCS4

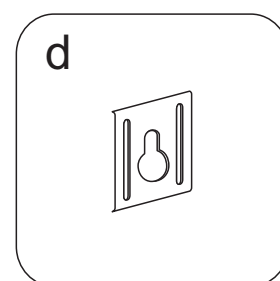


PCS4

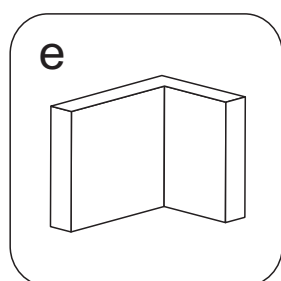


PCS4







# Cabinet

Choose a place you want to install the furniture, mark on the wall with a pencil according to the length and height of the furniture. Then drill holes on the wall with  $\Phi 10\text{mm}$  drilling.

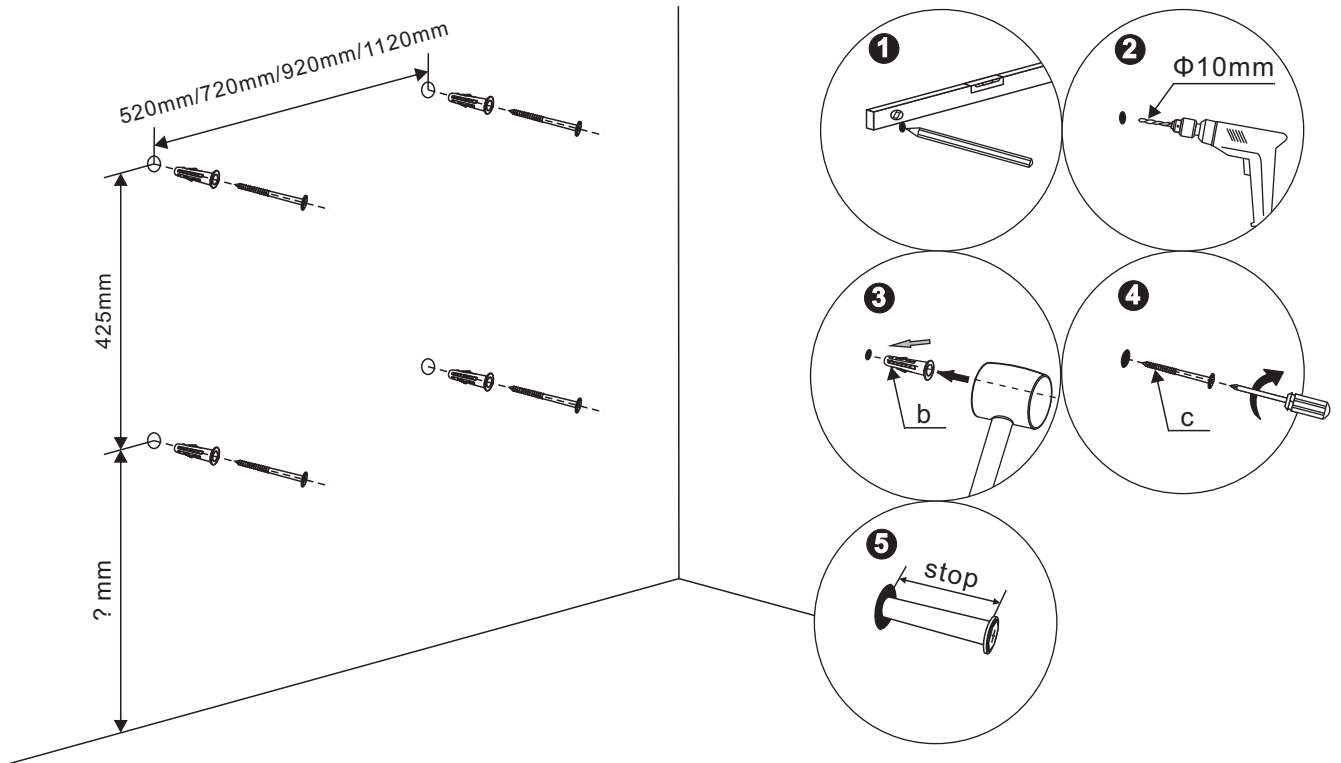

“?” you can adjust as you need.

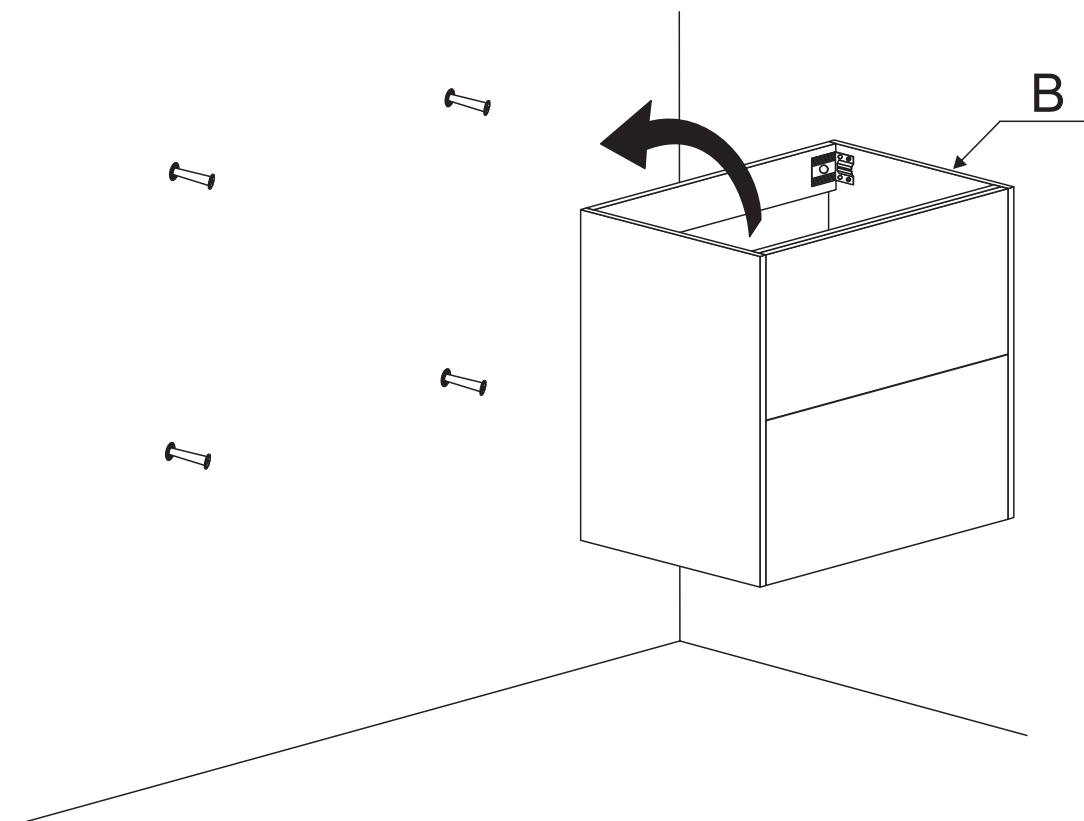

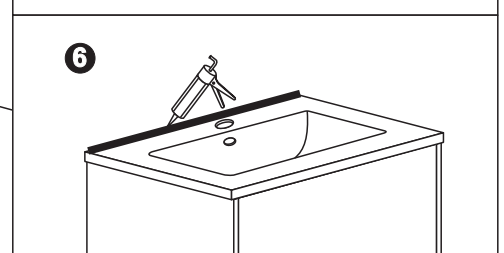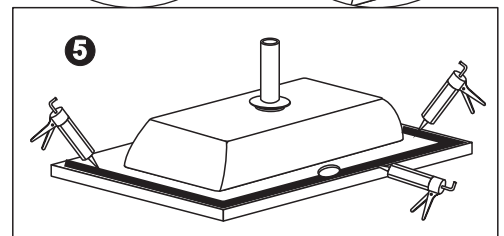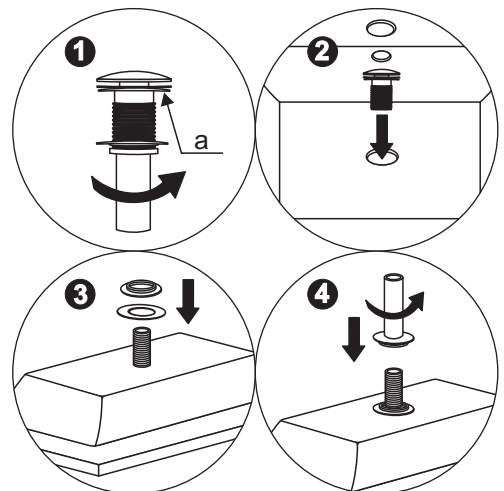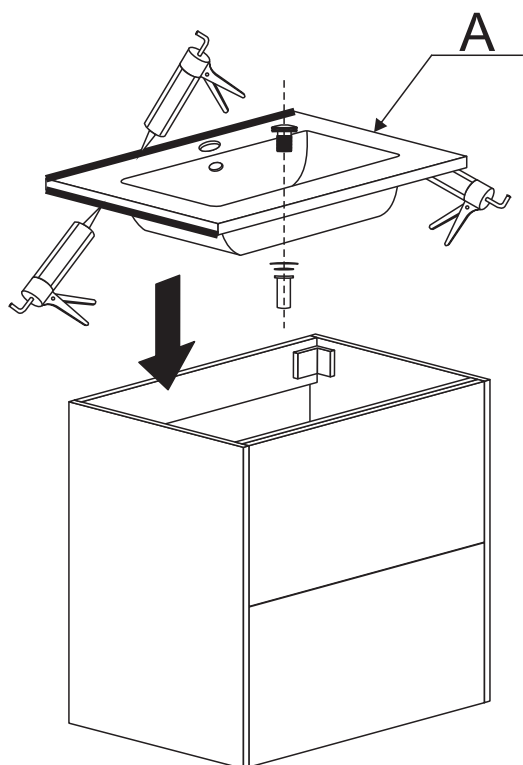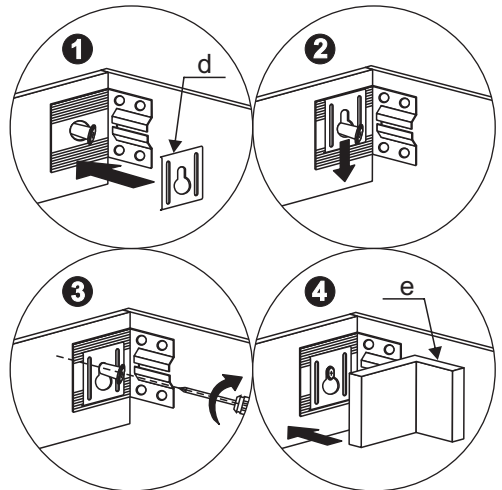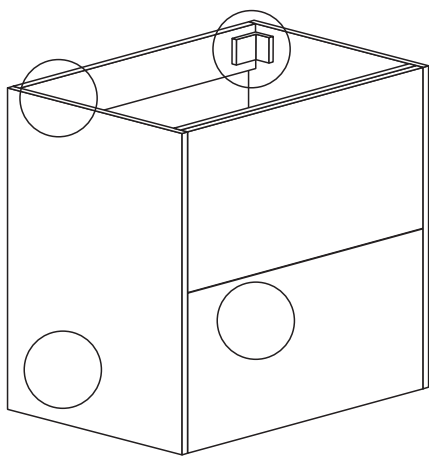

Maybe you will find the drawers is not flat after you finish installation. In this case, you can adjust the drawers by yourself. You can see there is a gasket beside the sliding rail. If you want the drawer upside, then rotate the gasket counterclockwise slightly, if you want the drawer downside, then rotate the gasket clockwise slightly.

