



For models ELC03/04/06/07/08/09

Konsumentkontakt
Arc E-commerce AB
Box 3124
13603 Haninge
Sverige

PACKING LIST (V brake type)




Front frame: 1set




Rear frame: 1set




Box Cover: 1 set Rain Cover : 1set

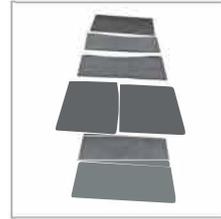


Wooden plate:1 set

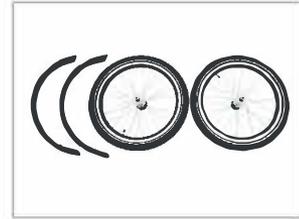


Front wheel set: 2 wheels
Front fenders: 2 pcs

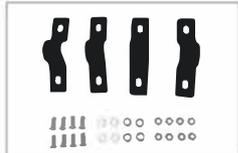

Clay plate: 4pcs
Screw: M5*12, round cross 8 pcs
Washer:Ø5 8 pcs
Nylon nut: M5, 8 pcs

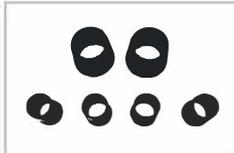

Handlebar bushing: 2 pcs
Bushing of Canopy tube:4 pcs

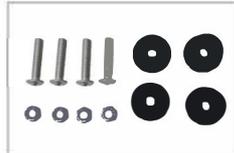

Screw: M6*30, Cross flat head screws, 4 pcs
Nylon nut: M6, 4 pcs
Plastic guide roller : Ø6, 4 pcs



Canopy tube:2 pcs




Angle iron (2pcs long 2pcs short): 4 pcs



Steel rail (bend): 1 pc
Steel rail (straight): 2 pcs
Main axle: 1 pc



Front Brake cable: 2 pcs
bend tube for V brake:2 pcs
Line tail cap: 2 pcs

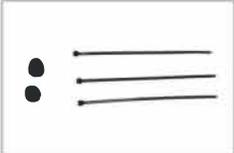


Ribbon: 3 pcs
Protector cover: 2 pcs



Screw: M6*30, Cross flat head screws, 8 pcs
Cap nut: M6, 8 pcs



Saddle:1 pc

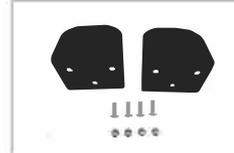


Foot step: 2 pcs
Screw: M6*18, Cross flat head screws, 4 pcs
Cap nut: M6, 4 pcs



Pedal:1 pair



Screw: M6*70, Round cross, 2 pcs
Washer:Ø6, 2 pcs
Nylon nut: M6, 2 pcs

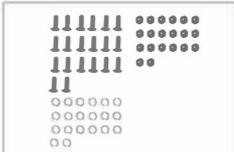

Screw: M6*18, Cross flat head screws, 20 pcs
Washer:Ø6, 20 pcs
Cap nut: M6, 20 pcs



Screw: M8*25, 7 pcs
Washer:Ø8, 7 pcs
Nylon nut: M8, 7 pcs



Seat post:1 pc



Safety belt:4 pcs



Front reflector: 2pcs
Side reflector: 4pcs



Screw: M6*20, Cross flat head screws, 8 pcs
Nylon nut: M6, 8 pcs



Self tapping screw: M4*25, 4 pcs



Screw: M6*35, Cross flat head screws, 4 pcs
Nylon nut: M6, 4 pcs



Charger: 1 pcs



Front light : 1 pc
Screw: M5*12, round cross, 1 pc
Washer:Ø5, 1 pc



Bell:1 pcs



picture 1



picture
2



picture 3



picture 4

1. Assemble Front Frame & Rear Frame

Take out main axle set (picture 2), **insert** it **into** the center hole above front frame from top to **bottom** (picture 1), knock it to the end. Turnover the front frame, put bearing & bowlware successively. Mount the main axle set onto head tube of rear frame. Note: do not make wrong direction (picture 4).



picture 5



picture 6



picture 7



picture 8



picture 9



picture 10



picture 11

Joint bowlware & bearing & trapezoidal steel plate & washer & spring washer & nut in order and tighten them slightly (see picture 5 & 6); using M8x25 outer hexagonal bolt, washer, nylon nut (picture 7), assemble 2 support steels in order (according to picture 8, 9 & 10) and tighten them firmly (picture 11).




picture 12



picture 13



picture 14



picture 15



picture 16



picture 17

2. Assemble Front Wheel & Front Fender

Mount front wheels to both sides of front frame hooks respectively (Note: make sure the tyre placed properly) and fix them with screws (see picture 13 & 14). Mount front fenders above tyres respectively, then mount the small holding plates (see picture 12, 15 & 16) and fix them with M5x12 round head cross, washer & nylon nut (see picture 17).



picture 18



picture 19



picture 20

3. Assemble Angle Steel


Mount angle steels onto the 4 corners of front frame. Please be careful of the position and direction (see picture 18 & 19). Fix them by using M6x30 big flat head cross screw with cap nuts.



picture 21



picture 22

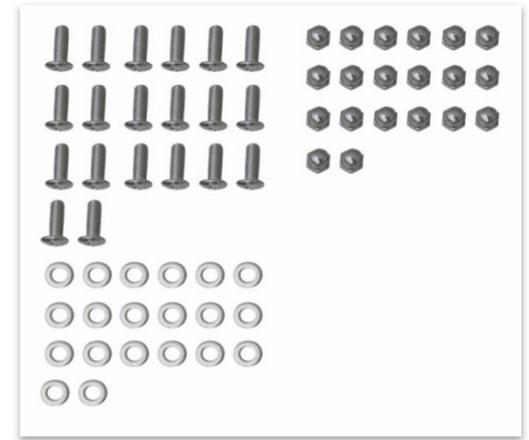

picture 23



picture 24




picture 25




picture 26

4. Assemble Front Box

Mount the wooden plates onto front frame respectively and fix them by using M6x18 big flat cross screw & washer & cap nuts for angle steels (see picture 21, 22 & 23), and M4x25 self-tapping screws for 2 seat plates (see picture 25 & 26). Insert the handlebar bushing and canopy bushing inside of an angle steel (see picture 21, 22 & 24).

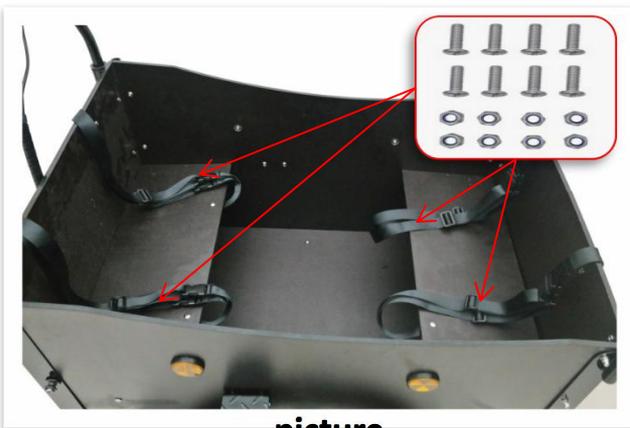


picture 27

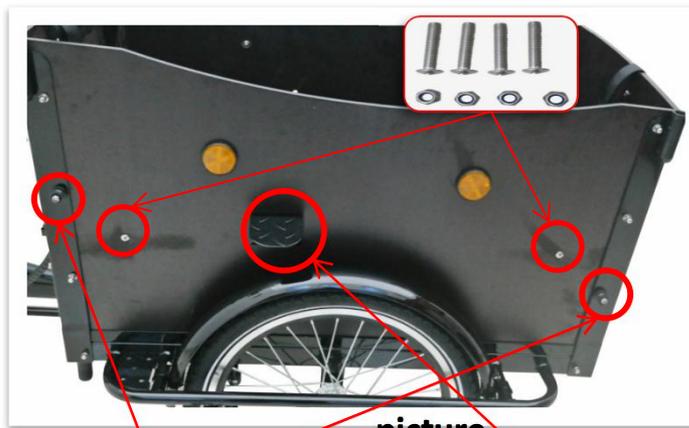

picture 28



picture 29



picture 30



picture 31



picture 32



picture 33

5. Assemble Safety Belts & Reflectors & Foot Steps & Guide Rollers & Front Light

Firstly, mount the safety belts onto seat plates respectively and fix them by using M6x20 big flat cross screw & nylon but (see picture 27). Secondly, use M6x35 big flat cross screw & nylon nut for fixing panel holes of seat plates (picture 28). Thirdly, mount yellow reflectors onto side plates while white reflectors onto front plate (see picture 28, 29 & 30); Fourthly, mount foot steps onto side plates (picture 28 & 32). Then, mount guide rollers onto both sides of angle steels (picture 28 & 31). Next, mount front light onto front tube (see picture 30 & 33).



picture 34



picture 35



picture 36



picture 37




picture 38

6. Assemble Handlebar & Box Cover

Insert the handlebar inside handlebar's fixed tube and adjust it to suitable height. Twist M8x20 socket hexagon screw first, then twist M8 normal nut (picture 34 & 35).

Take out box cover, put it on the top of front box (Note: the side with holes should be installed at the back). Fasten sticking band and hang the rubber band on the guide roller (see picture 36, 37 & 38).

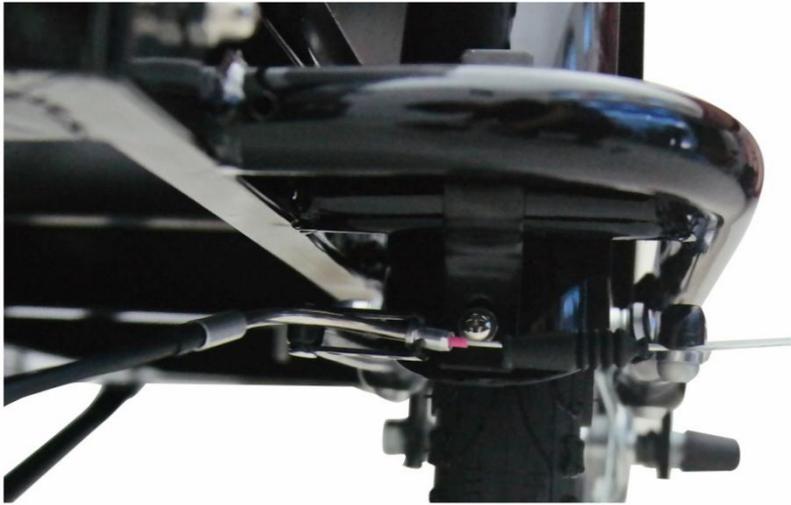


picture 39



picture 40



picture 41

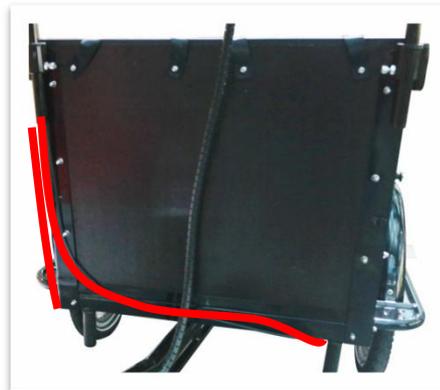

picture
42



picture 43

7. Wear Brake Cable & Adjust V Brake

Take out brake cable, V brake accessories and cable tips. Firstly **set** brake cable (please note direction) (picture 41 & 42); **To pass through** hook and extension tube **into** both **sides** of wire end and **connect with** V brake, **and** adjust brake block. **Fix the brake with bolts and adjust it** (picture 39 & 40)



picture 44



picture 45



picture 46



picture 47

8. Assemble Canopy & Recharger

Take out canopy tube and canopy. Insert canopy tube inside of bolster, then put canopy on the top (Note: **the side with holes should be installed at the back**), sticking band, hang rubber band on the guide roller (picture 44 & 45); Insert recharger plug inside **charging** hole when **charging** (picture 46&47).