



Målebånd

Vatterpas


Boremaskine

Hammer

Blyant


Skruetrækker

Spejl

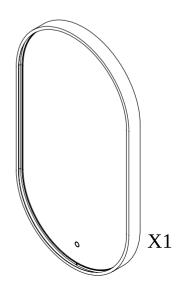

Plugs







Monteringsbeslag




X2

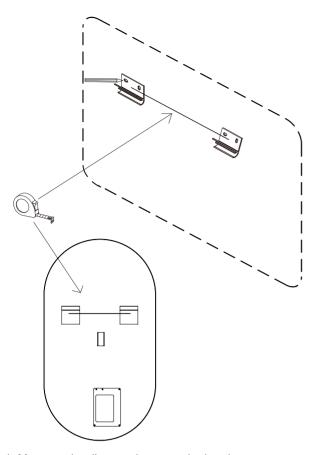


1. Measure the distance between the brackets on the mirror, then measure the location of the holes on the wall

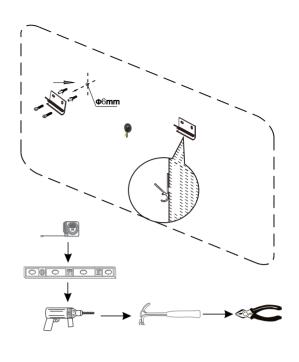

2. Drill a 6 mm hole in the markings and insert the plug into the holes As shown in the picture, fix the bracket to the wall with the screws.

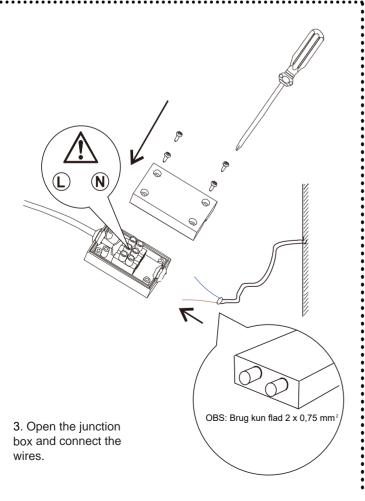

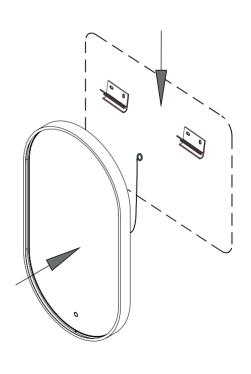

4. Hang the mirror on the wall as shown in the picture