


mimSAFE



www.mimsafe.se

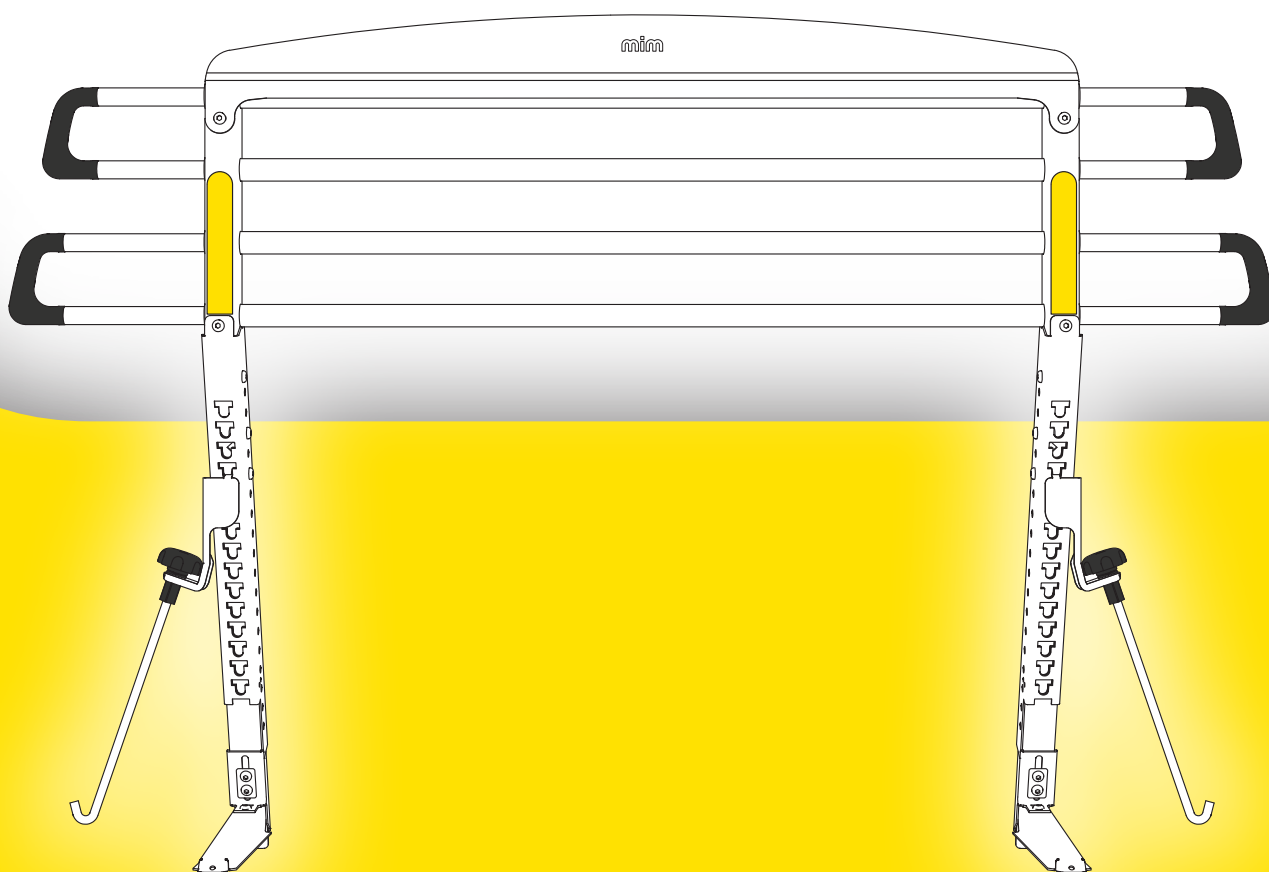

ASSEMBLY INSTRUCTIONS

VARIOBARRIER



small

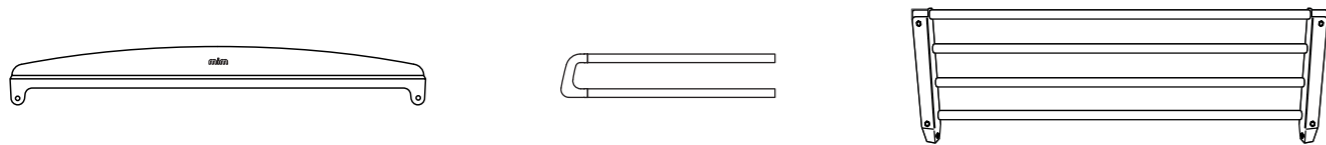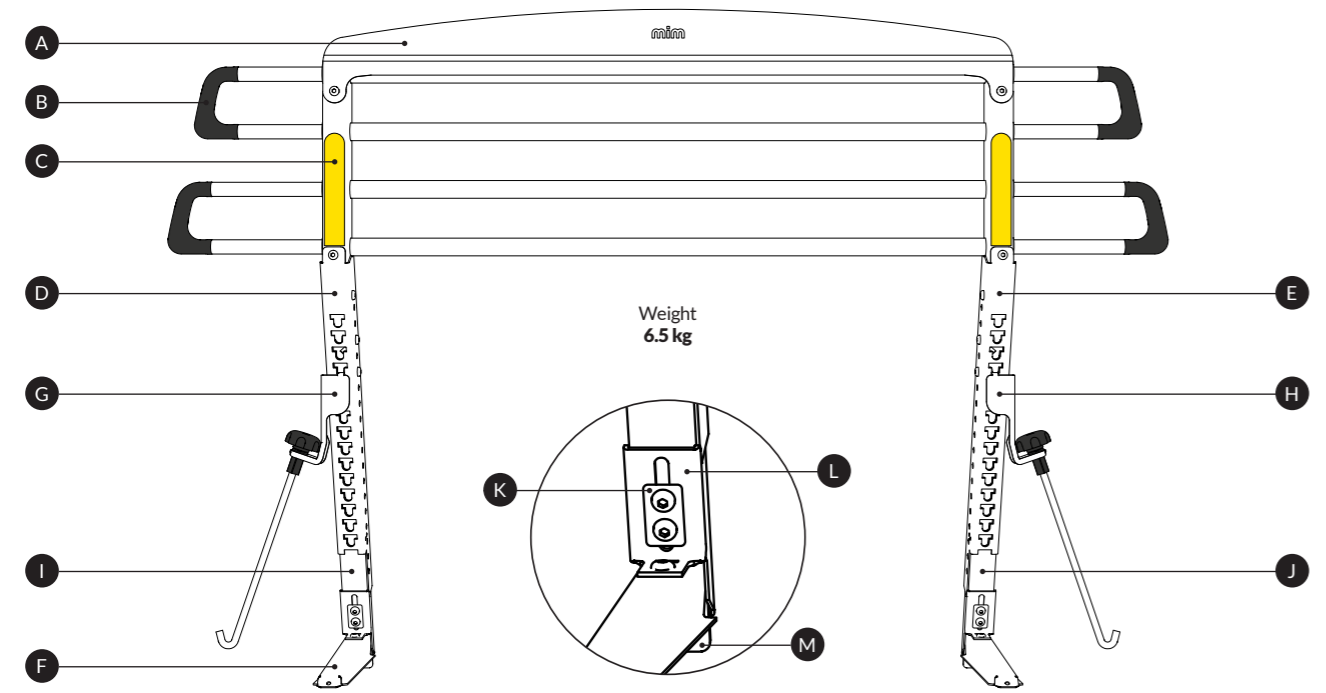

A F524
Part no 1x

B F521
Part no 4x

C FS508
Part no 1x

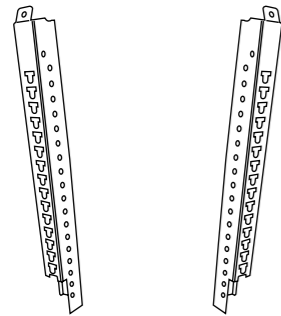

F F522
Part no 2x



D F514L
Part no 1x

E F514R
Part no 1x

G F526L
Part no 1x

H F526R
Part no 1x

I F510L
Part no 1x

J F510R
Part no 1x

F529 2X K	F527 2X L	F528 2X M	M-460641AY 8X rubber end caps	M-460641AL 8X plastic end caps	M-M37202_2014 2X
M-SM6X14AI 18X 	ALLEN KEY 4 1X 	M-10683 2X 	M-460641K 2X 	M-460641I 2X 	


STEP
1




STEP
2




STEP
3

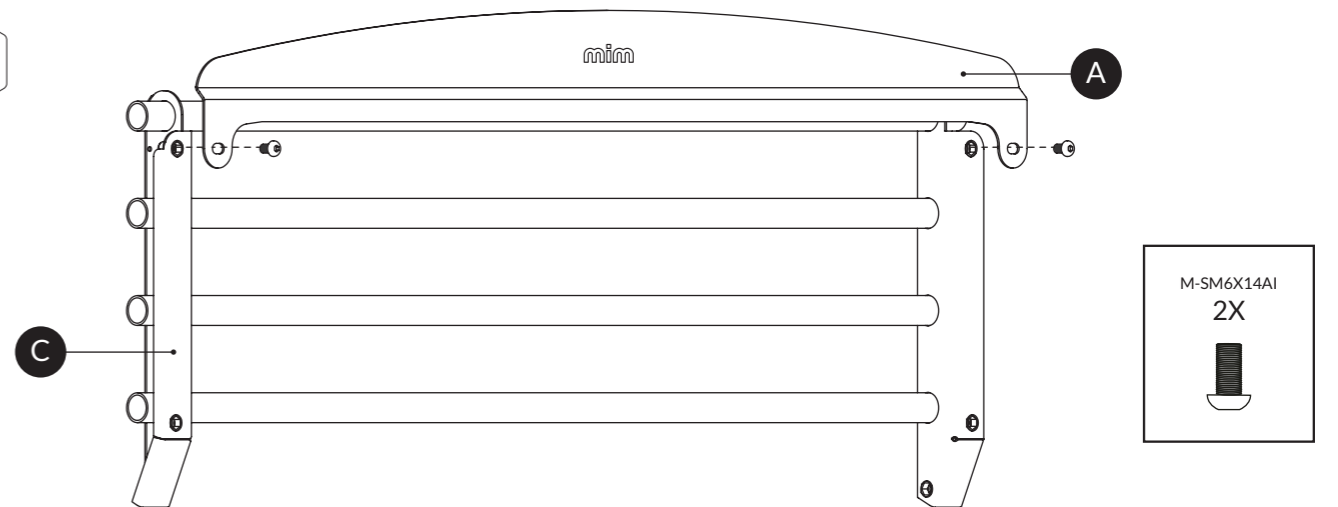


STEP
4

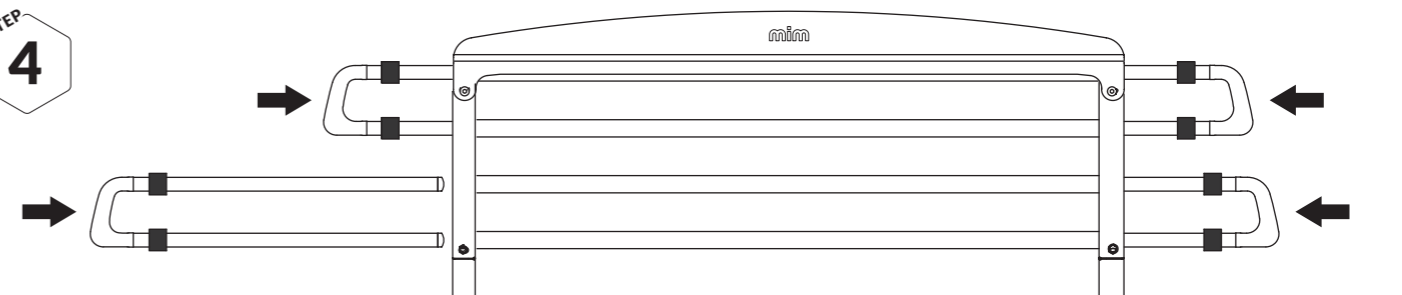


STEP 5

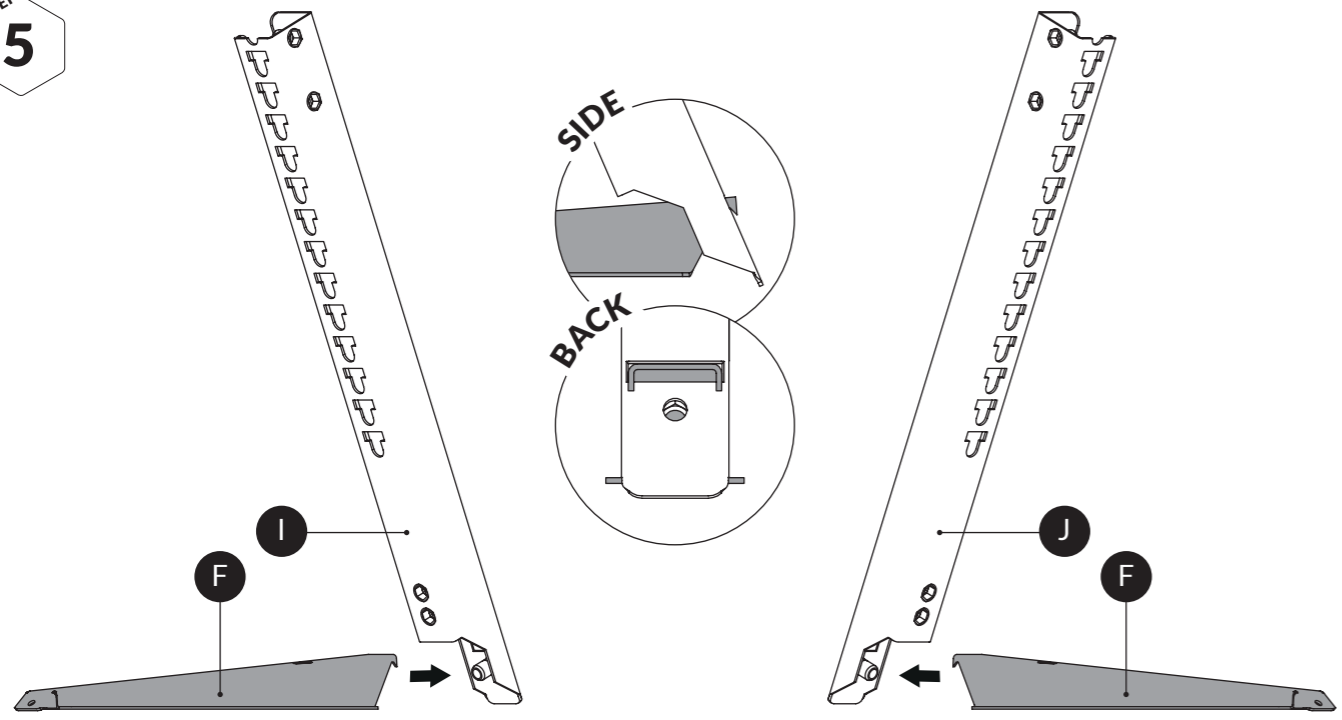


STEP 8

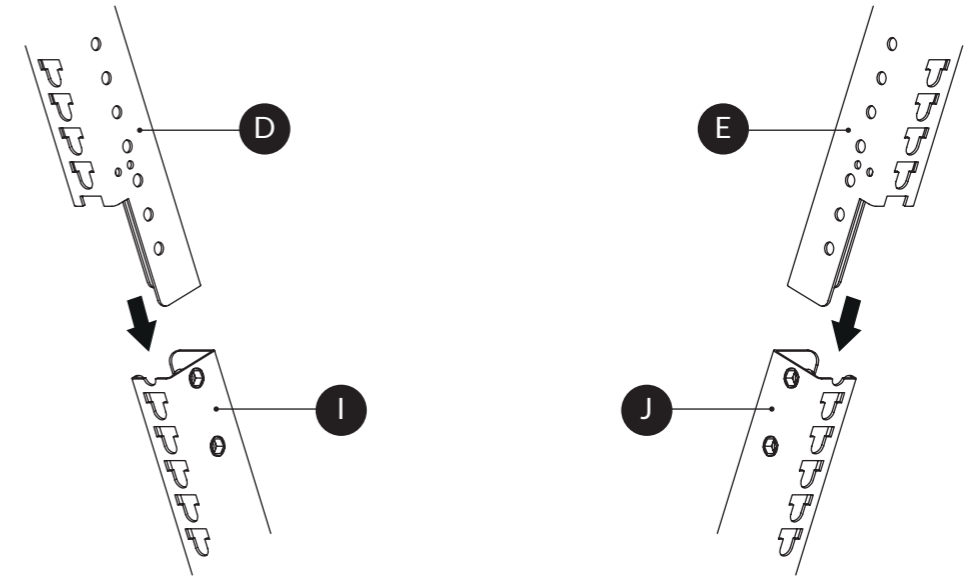


STEP 6

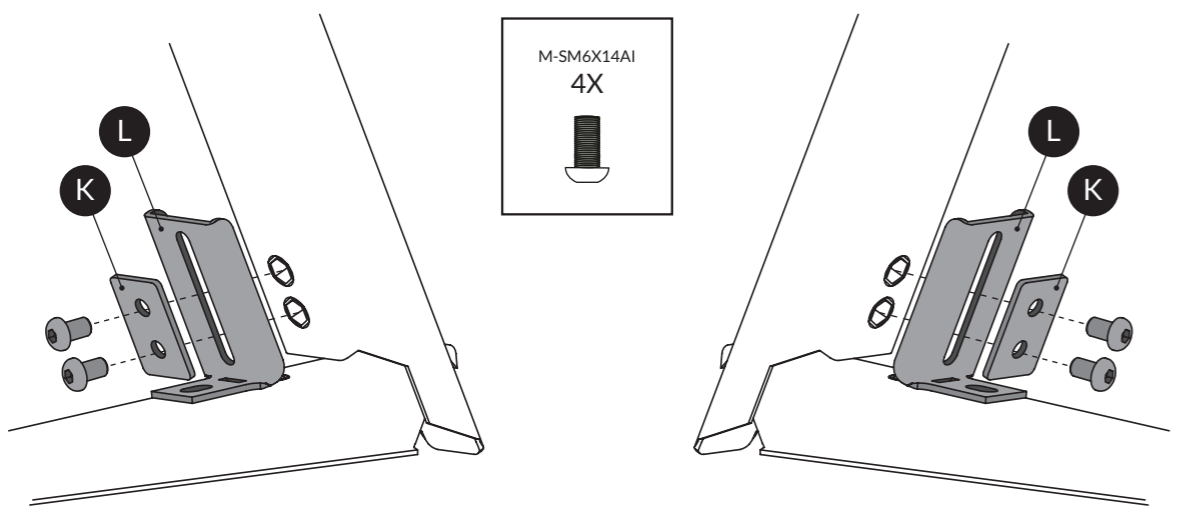


STEP 9

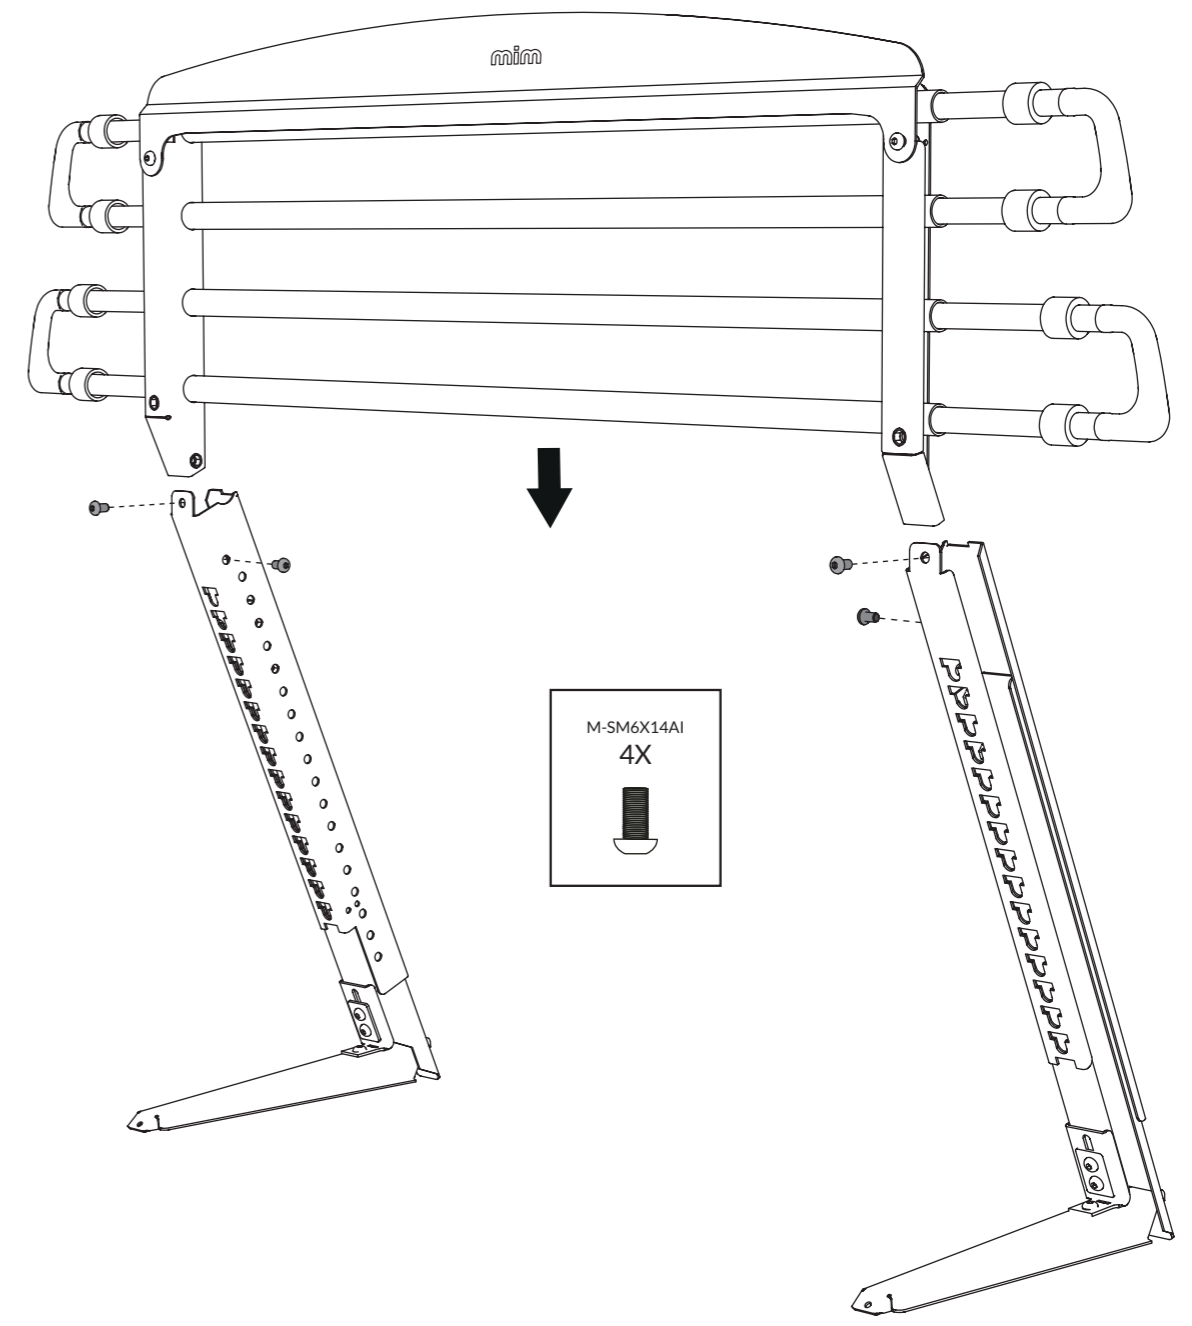


STEP 7

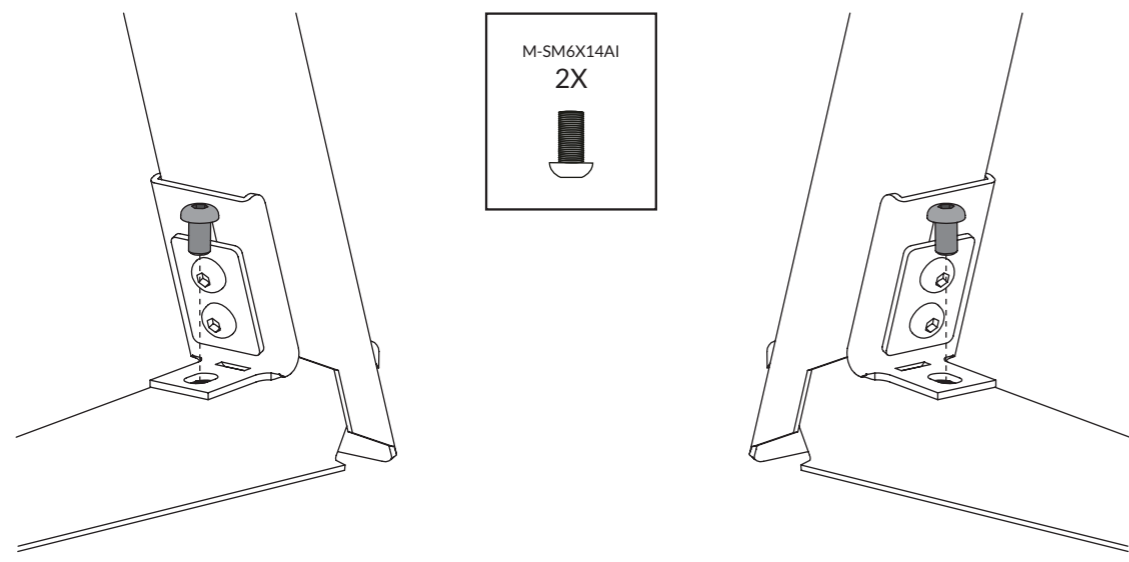


STEP 10

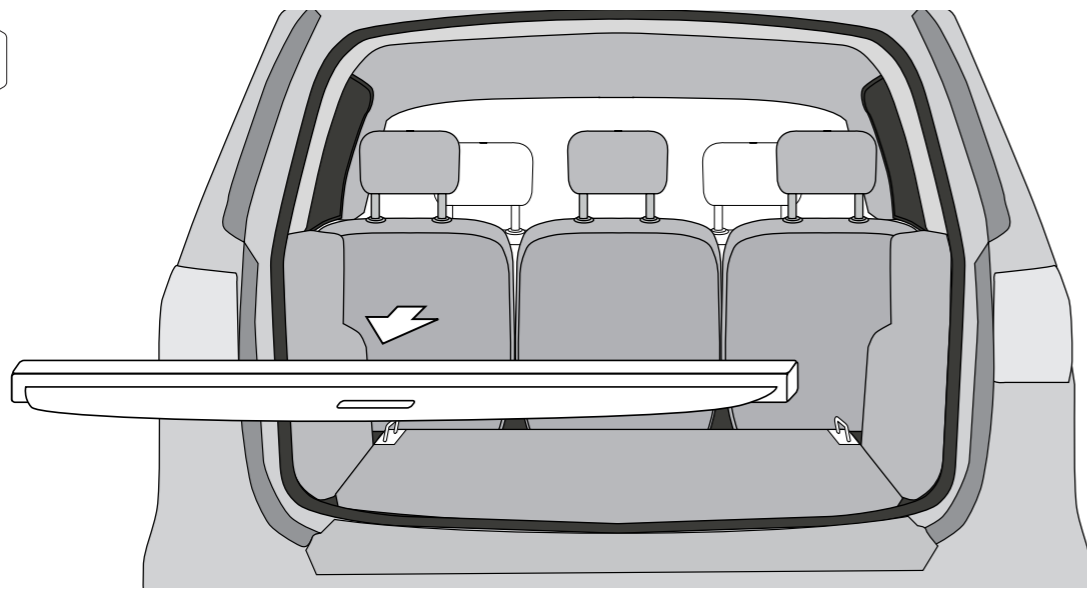


STEP 13

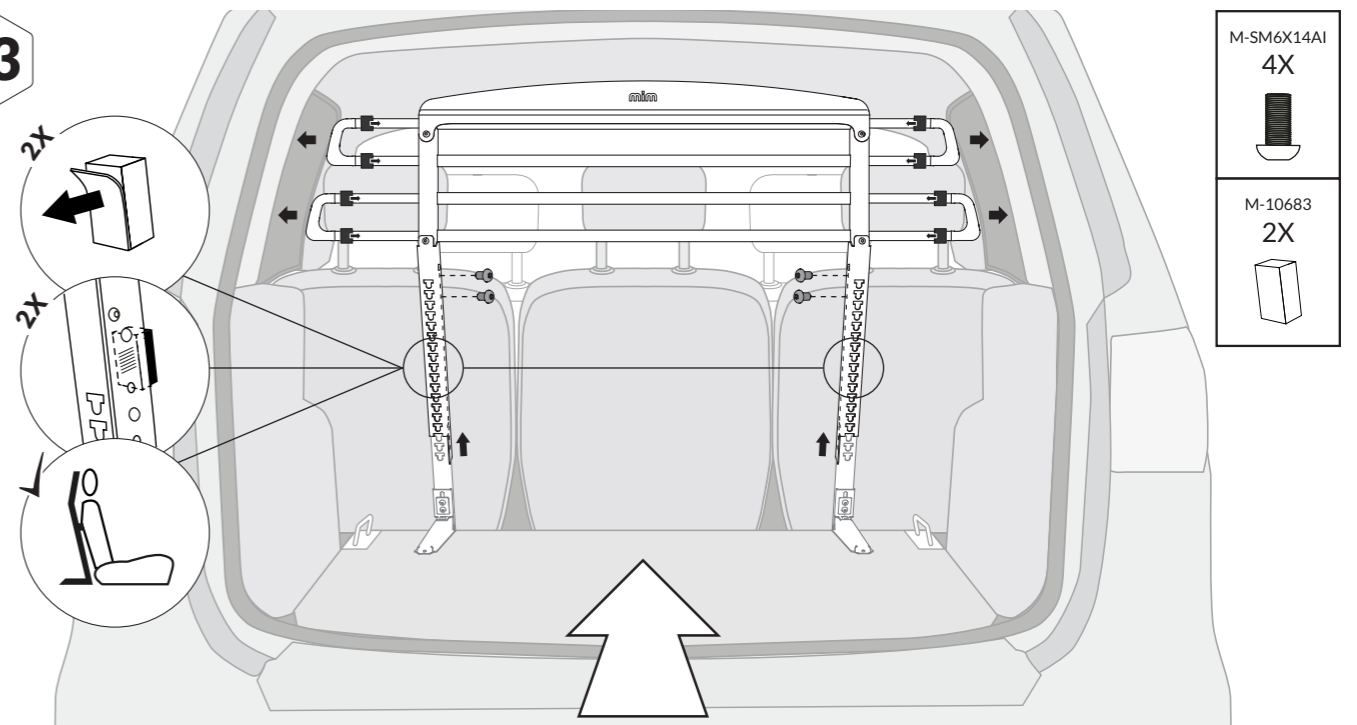


STEP 11

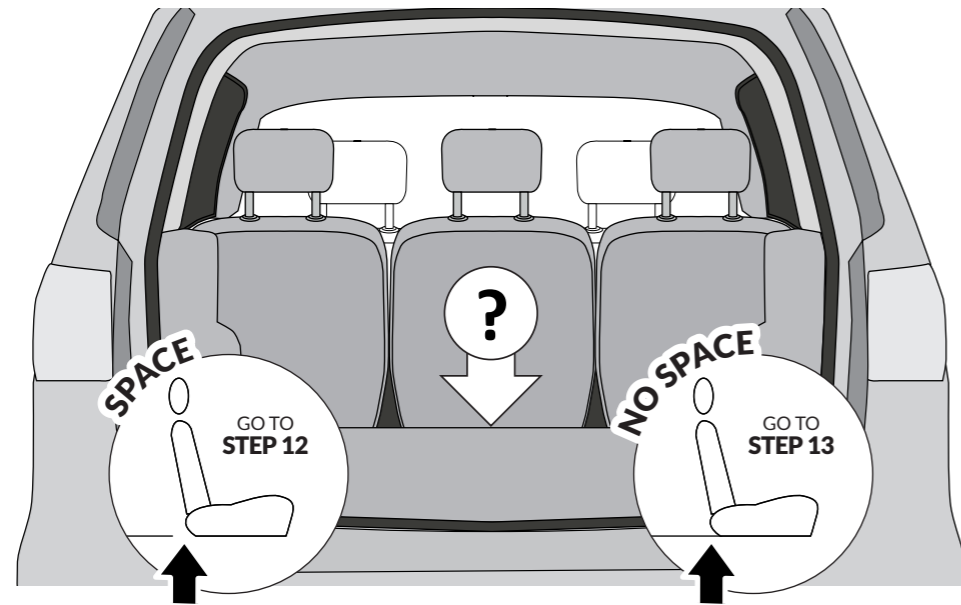

STEP 14

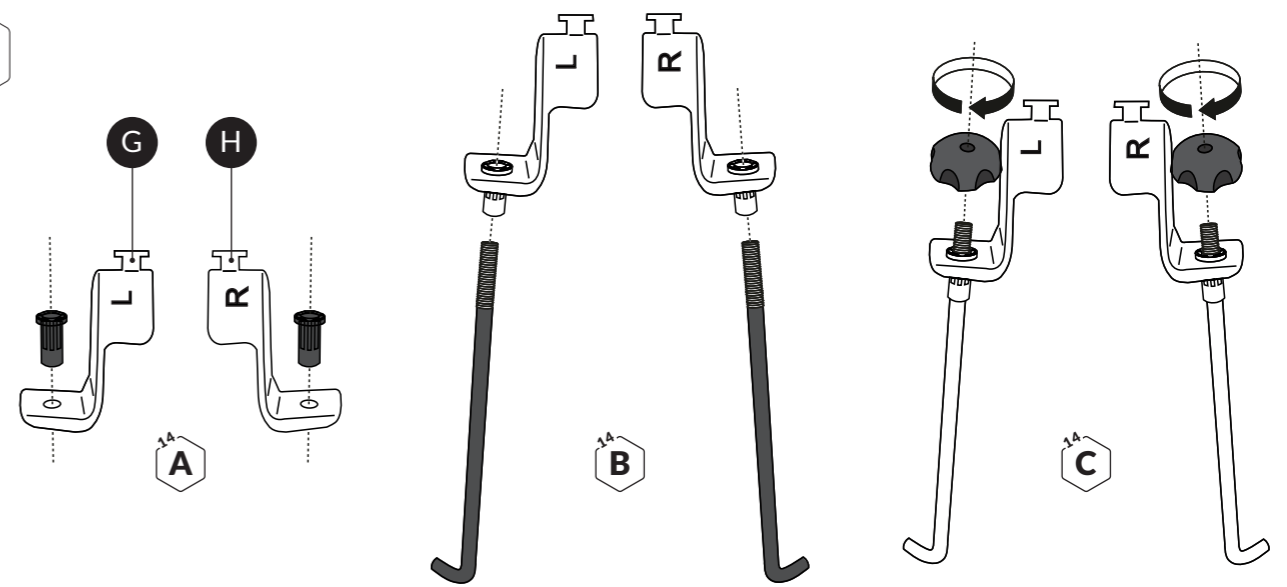


STEP 12

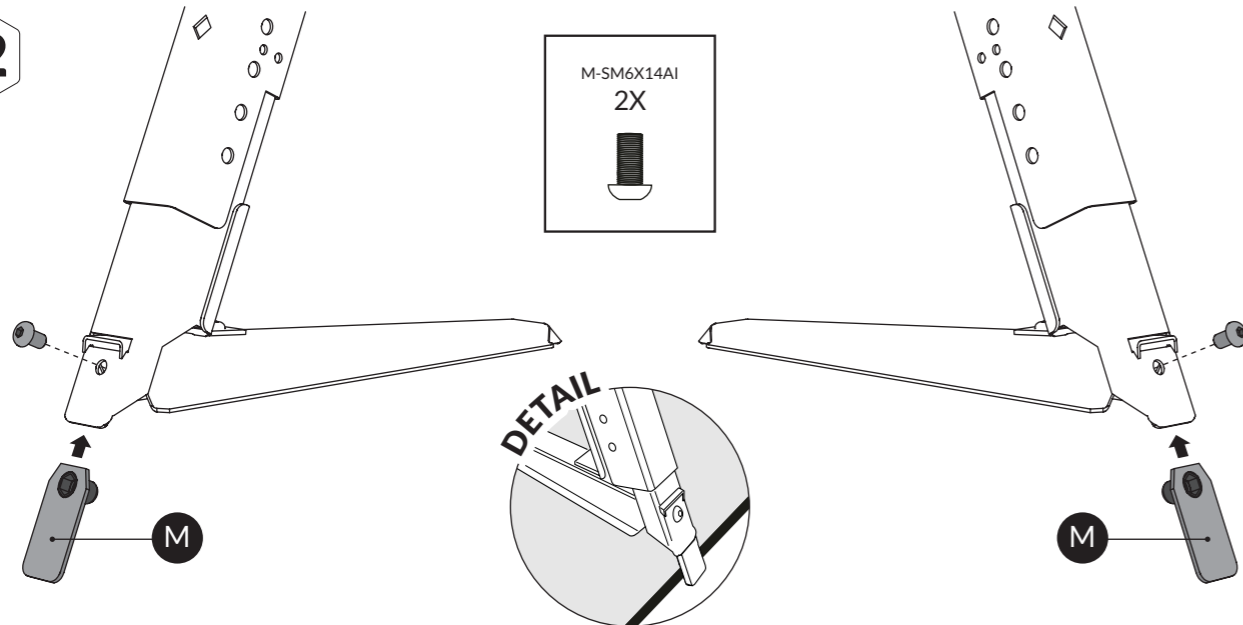



STEP
15




STEP
16

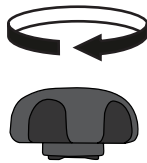

USE HANDS ONLY
TIGHTEN THE WHEELS AGAIN
FEEL THE WHEEL SNAPPING

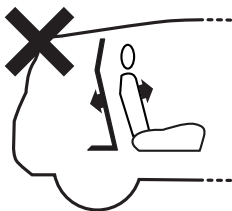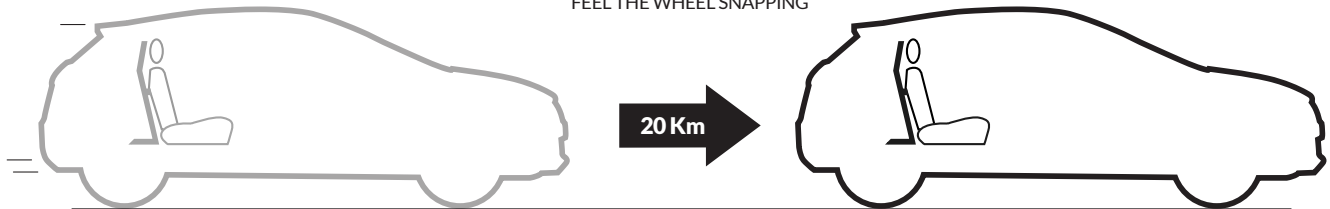


VarioBarrier must
ALWAYS BE PLACED
against the back seat

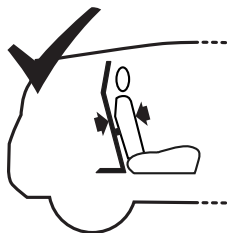

WARNING

VarioBarrier is
NOT SUITABLE FOR
outdoor use

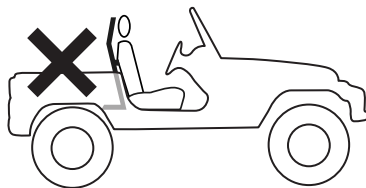

Wipe with a
DAMP CLOTH
with soap

