

SVEDBERGS®

S

N

DK

FI

GB

RU






Monteringsanvisning duschsits Relax
Monteringsveiledning dusjsete Relax
Monteringsvejledning brusesæde Relax
Asennusohje kaksiovinen suihku istuin Relax
Assembly instruction shower seat Relax
Инструкция по монтажу душ сиденье Relax

Sid / page
2 - 3

Monteringsanvisning / Monteringsveiledning /
Monteringsvejledning / Asennusohje
Assembly instruction / Инструкция по монтажу

Sid / page
4


Borrmall / Boremalen / Boreskabelon /
Porausmallineeseen / Drilling template / шаблон
для сверления

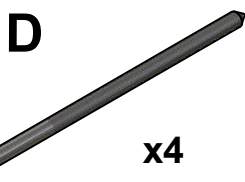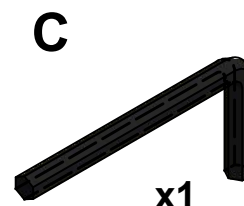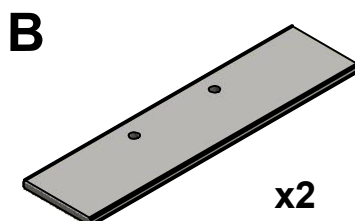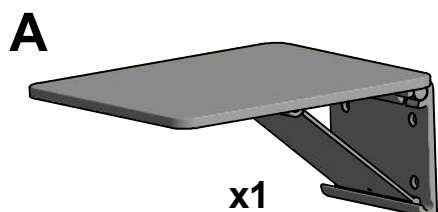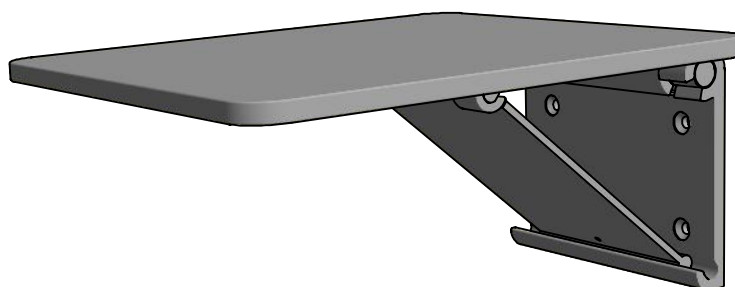


SVEDBERGS®

Svedbergs i Dalstorp AB, Verkstadsvägen 1, 514 63 Dalstorp, SWEDEN
0321-53 30 00, kundtjanst@svedbergs.se, info@svedbergs.se
www.svedbergs.se, www.svedbergs.no, www.svedbergs.dk, www.svedbergs.fi, www.svedbergs.com


1

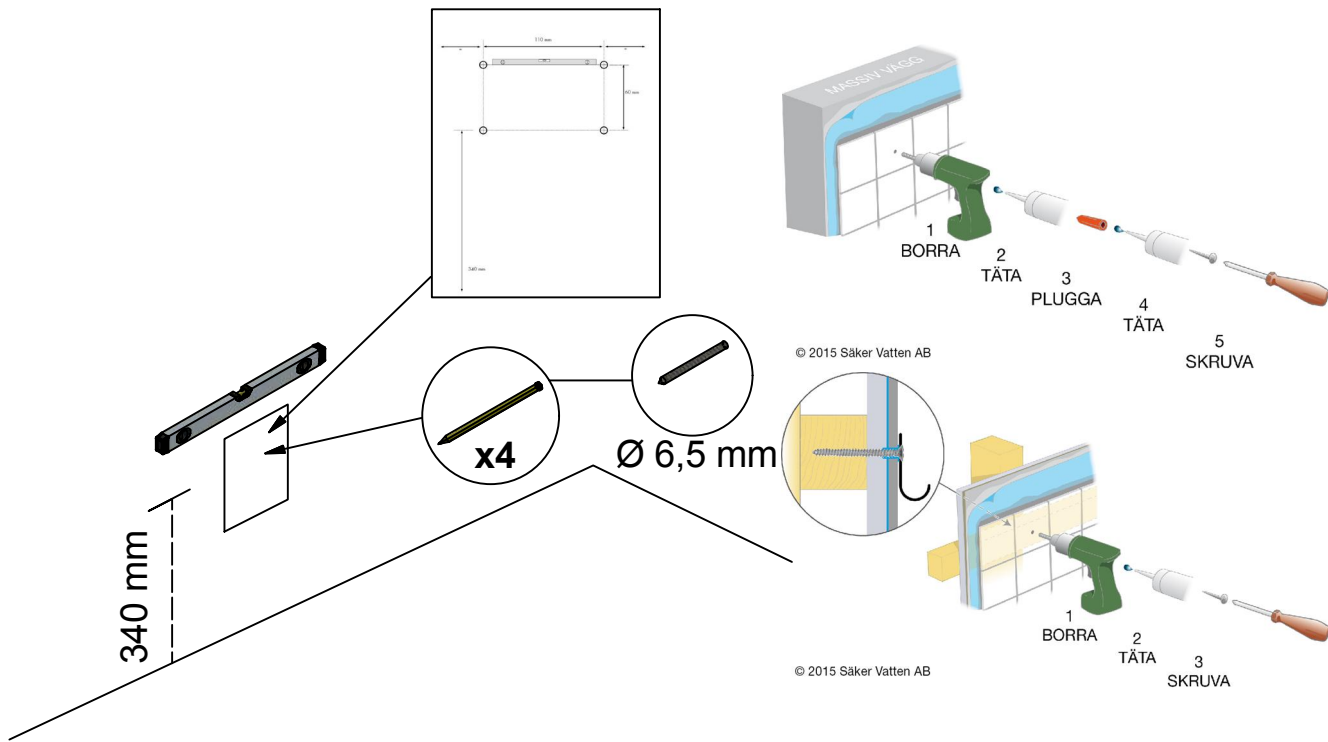


2

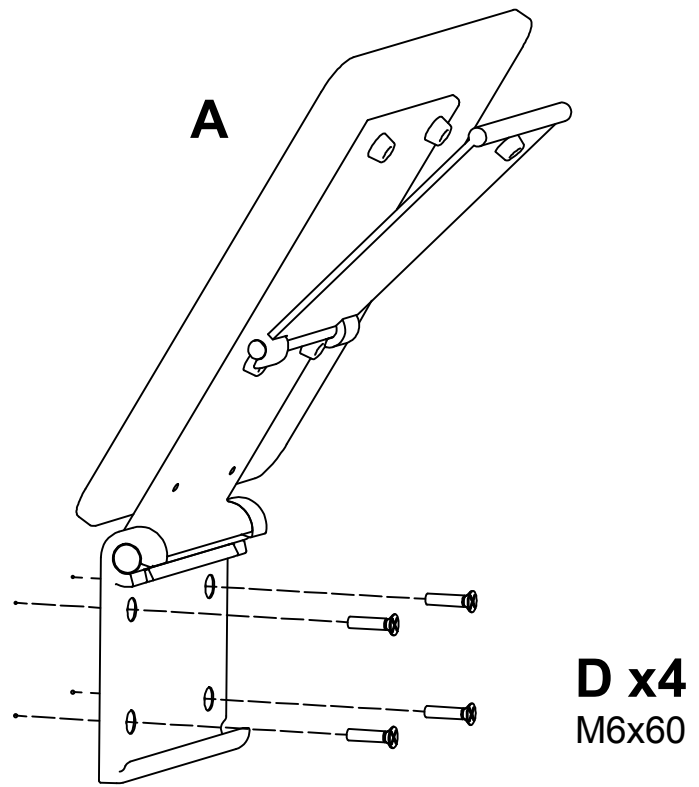


1

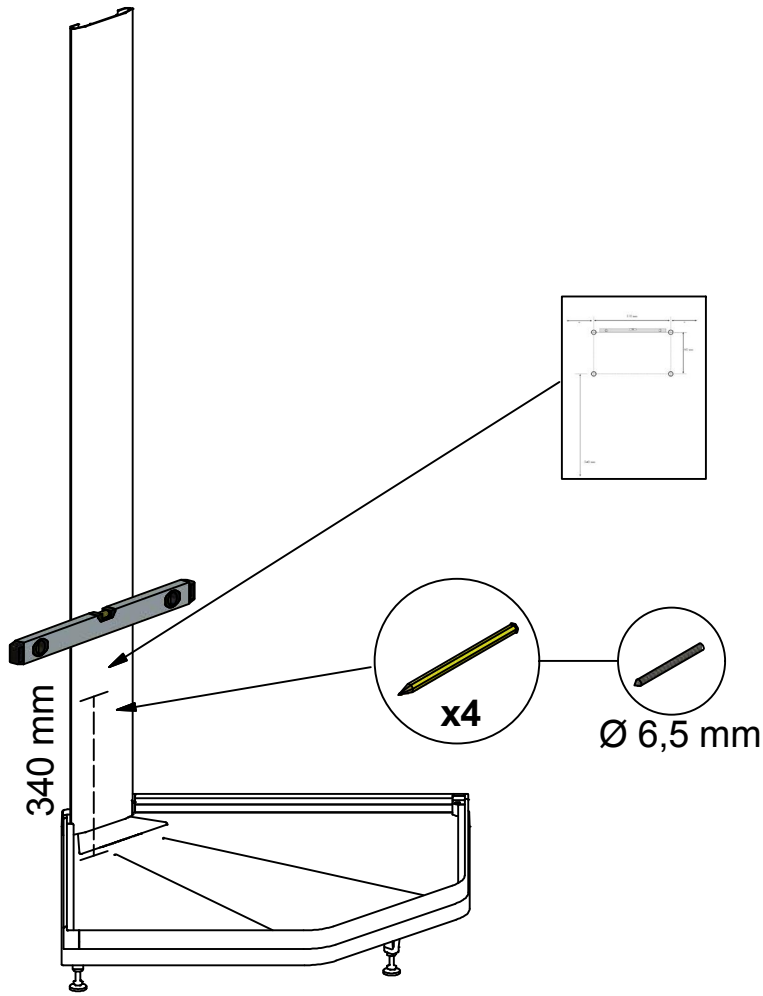

2

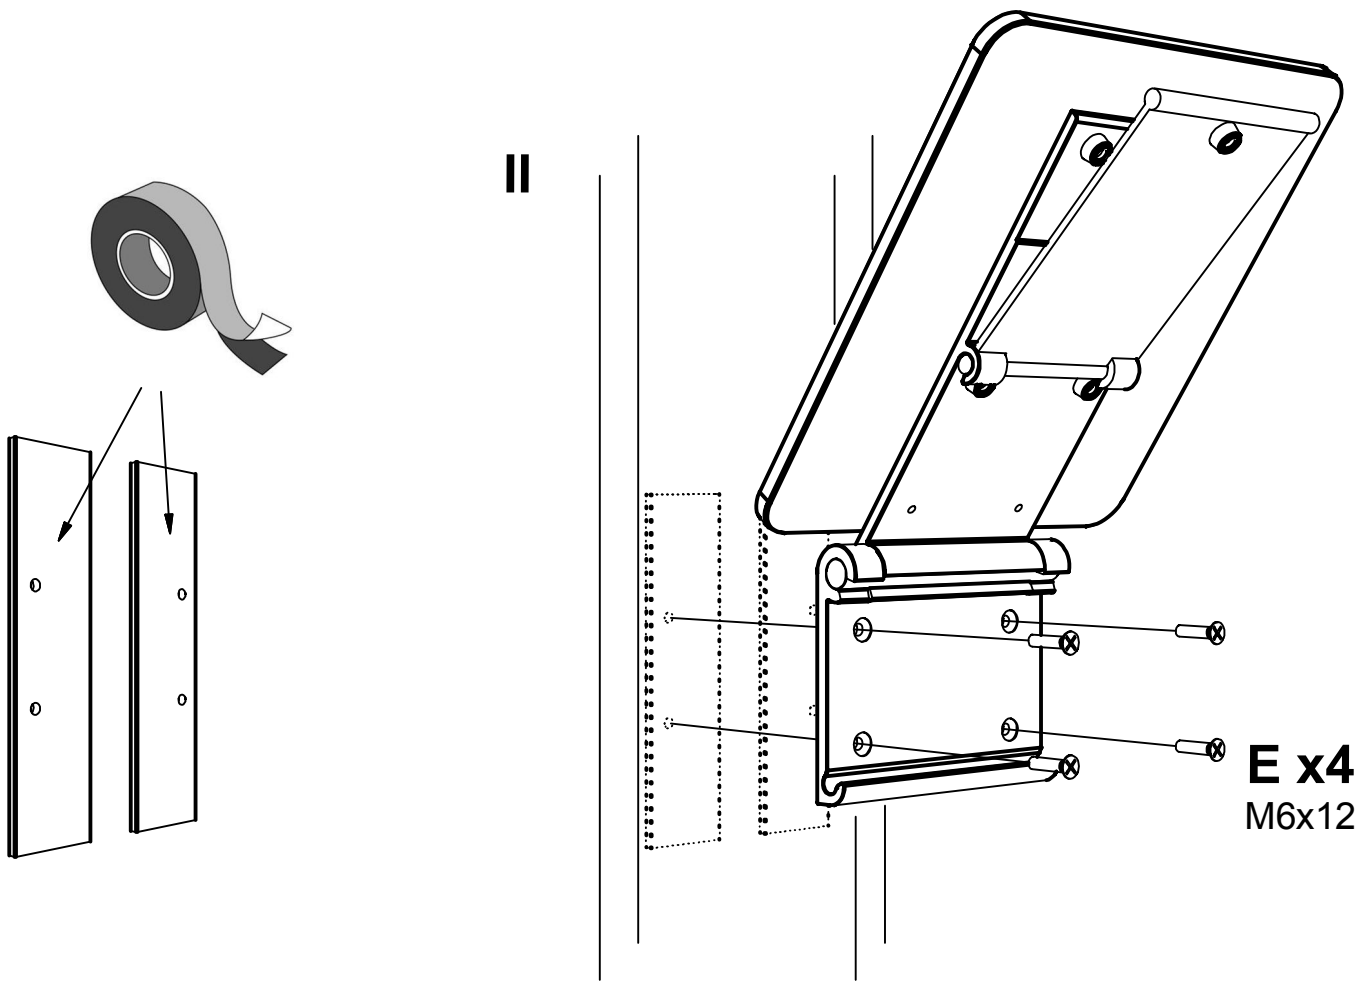

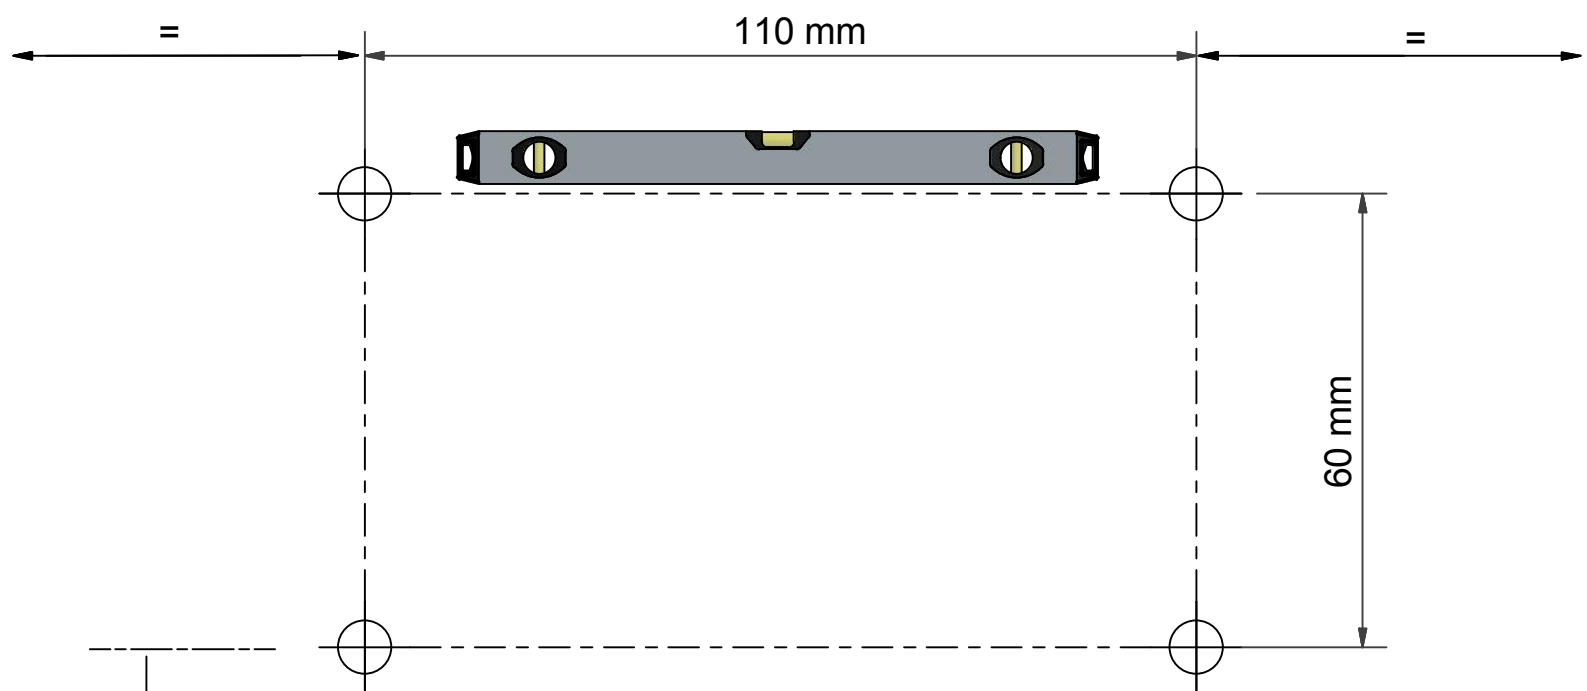

S **OBS! Kontrollera mått innan borrarning!**

GB **NOTE! Check measurements before drilling!**

340 mm

SVEDBERGS[®]

R900629201

Rev.no 2018-06-11