MONTERINGSANVISNING ASSEMBLY INSTRUCTIONS

PADANG SOFFBORD

Art. nr 18010-680





HOME & INTERIOR

Assembly instructions Monteringsanvisning



18010-680 Assembly Instruction

Thankyou for purchasing this quality product. Be sure to check all packing material carefully for small part, which may have come loose inside the carton during shipment. Count all the parts and hardware, compare with partlist below to be sure all part are present.

- 1. Lay the table face down on a clean, flat, soft surface and use cution during
- Lay the table lack down on a creat, hat, solv surface and use cuton during assembly to prevent scratching the table top.
 Follow the instruction and steps illustrated. Please do not tighten the bolt on any side on table leg before the table is fully set up.

PADANG/CIREBON SOFA TABLE SQUARE PARTLIST			PADANG/CIREBON SOFA TABLE SQUARE 88888-172 SP SCREW SET			
No.	Description	Qty.	No.	Description	Qty.	
	88888-174 SP PADANG SOFA TABLE SQUARE -	2	A	BOLT JP M6 x 10 mm	16	
2	FRAME JOINT LEGS	4	В	SCREW Ø10 x 11/4" PAB	12	
_	BASE PANEL	1	С	WASHER M6	12	
4	TOP PANEL	1	PADANG/CIREBON SOFA TABLE SQUARE			
				SP PLASTIC FEET		



No

Description

Qty.


4




STEP-3


TIME


·(1)





Tighten all screws 20 cross-tighten all screw fully assembled. Note screws are tightened or by screw driver, da the product may app

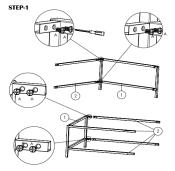

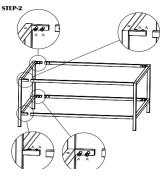

STEP-4



Note: Improper use, improper assembly and mishandling may lead to defects / cracks appearing

OBS! : Oaktsam hantering och montering kan leda till skador / sprickor

Hinweis: Unsachgemäße Verwendung, unsachgemäße Montage und unsachgemäße Handhabung können zu Defekten / Rissen führer

VENTURE DESIGN VENTURE DESIGN HOME & INTERIOR

2020