


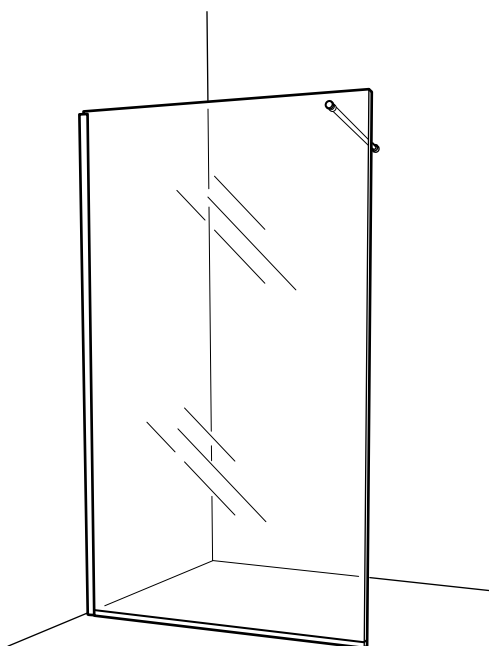

westerbergs

Clear 800/900

SE

monteringsanvisning

DK



monteringsanvisning

NO




monteringsanvisning

FI


asennusohje



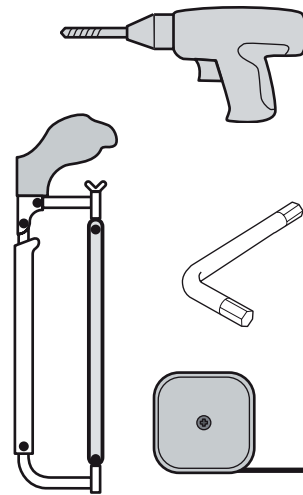
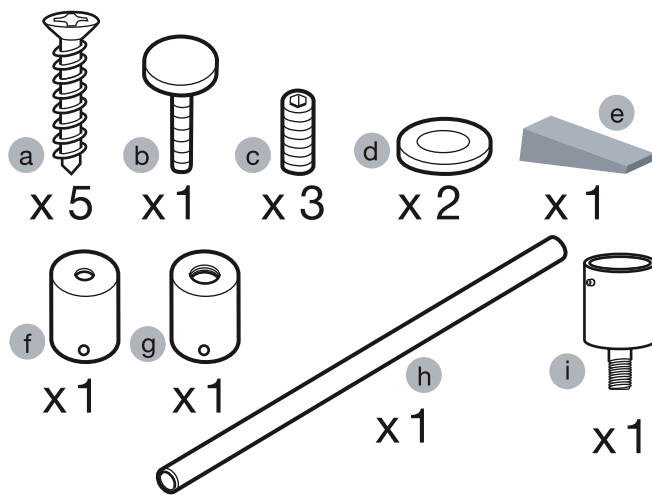





i

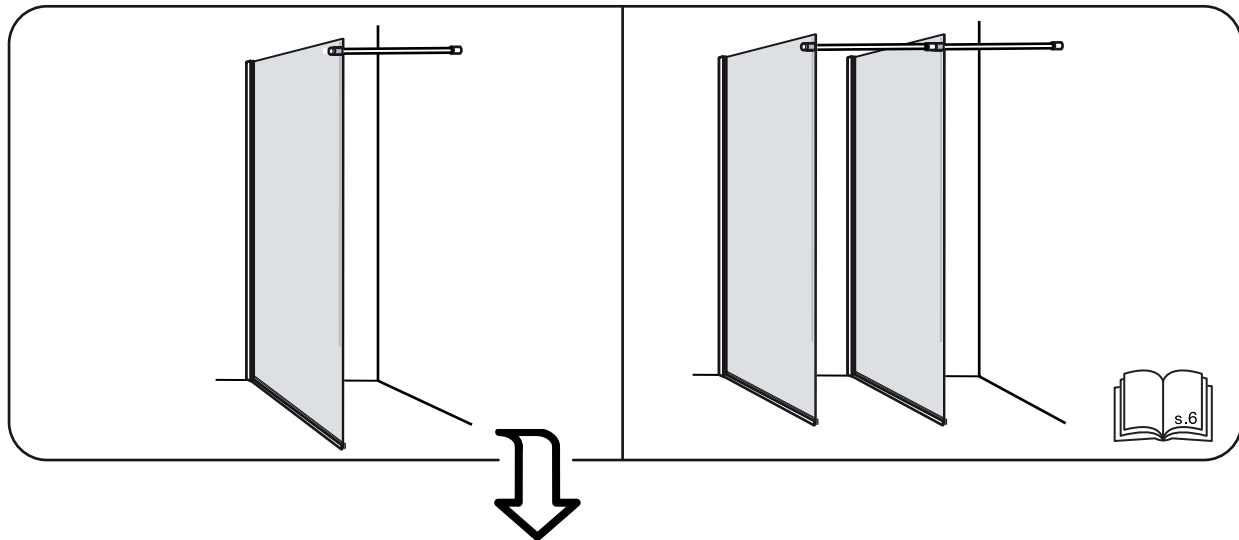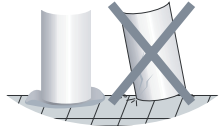


	A	B
80	756	800
90	856	900

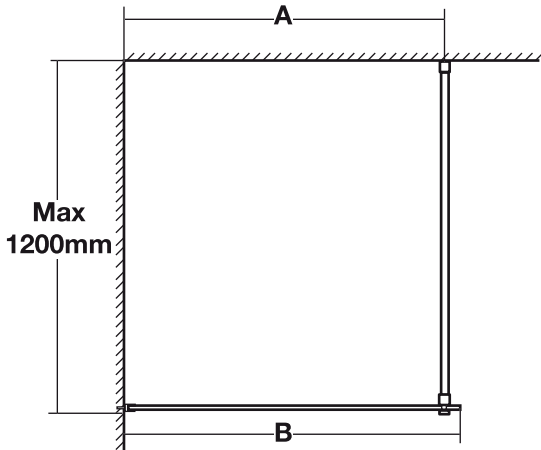

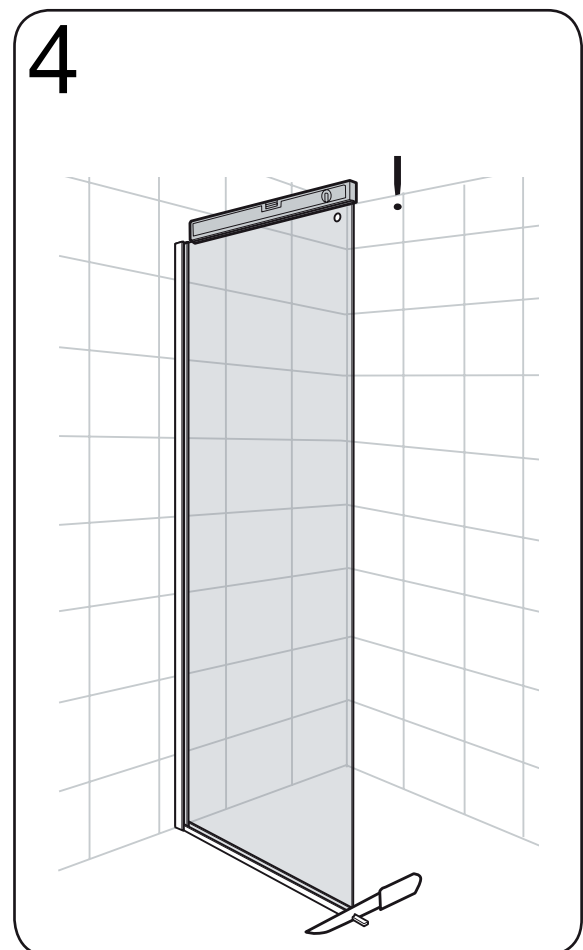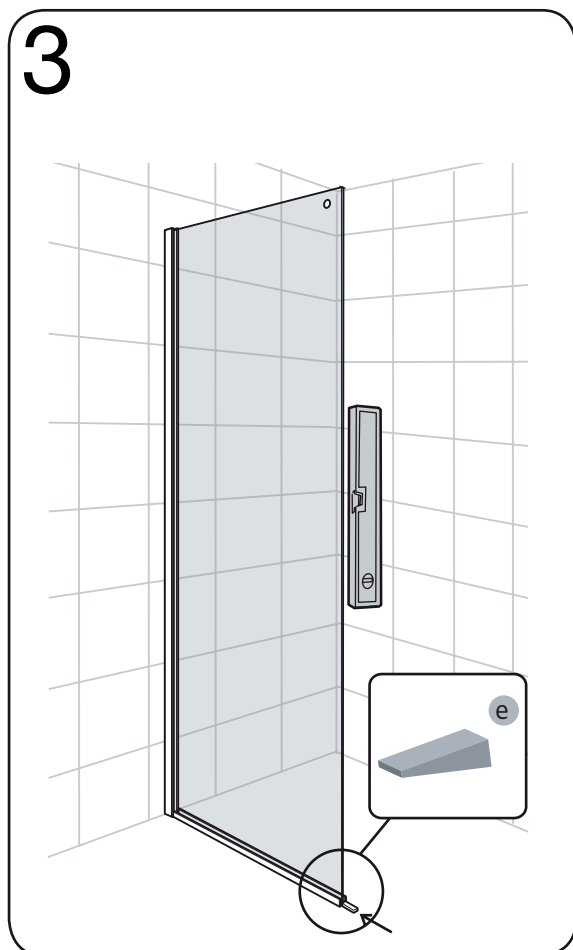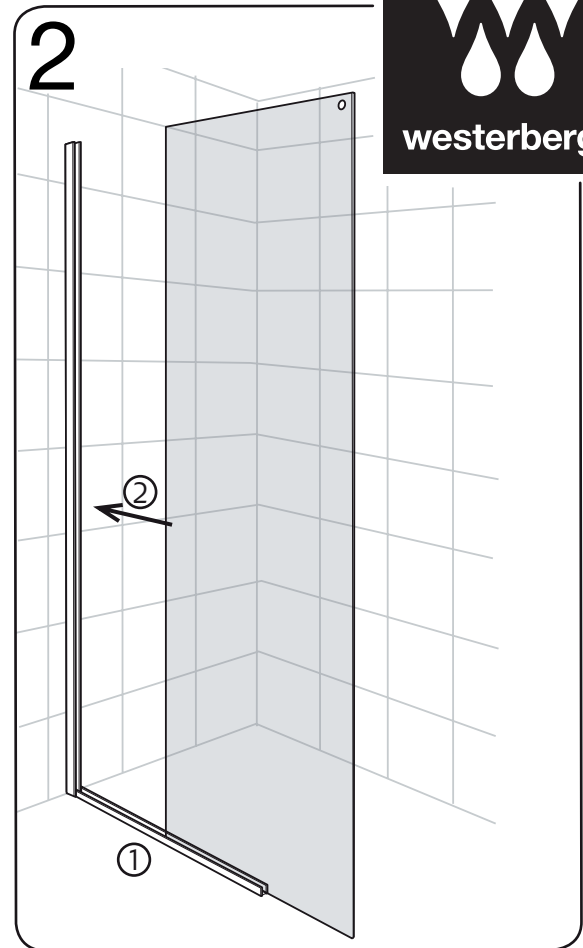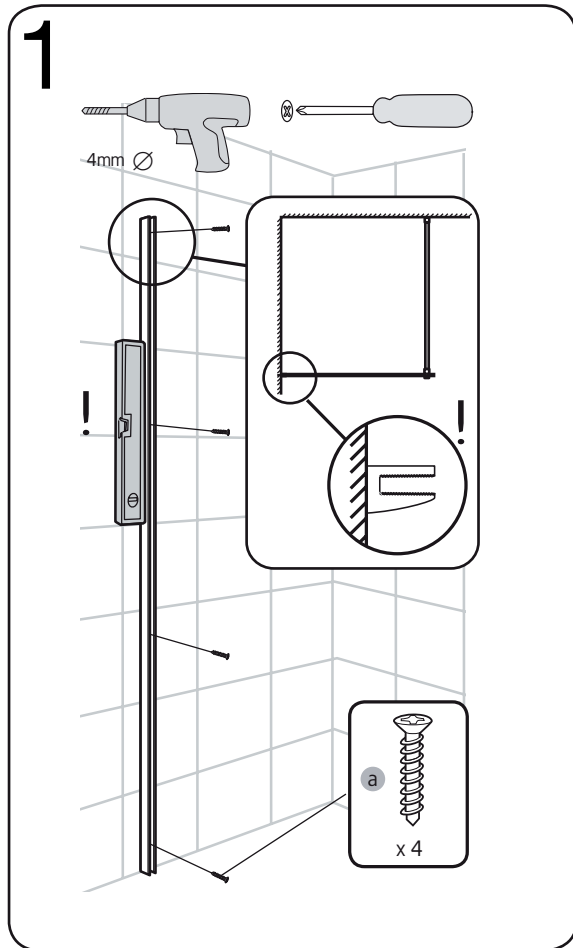


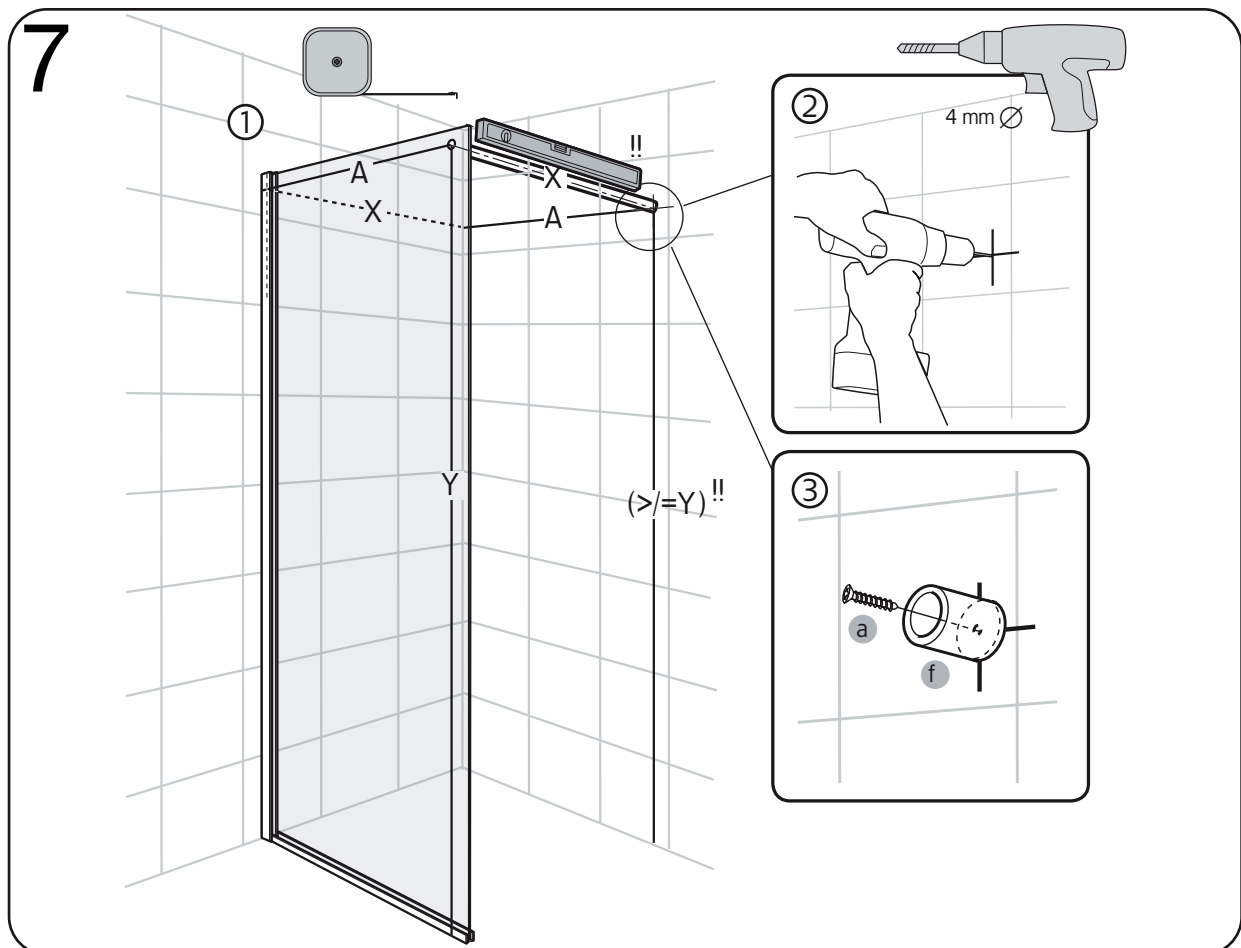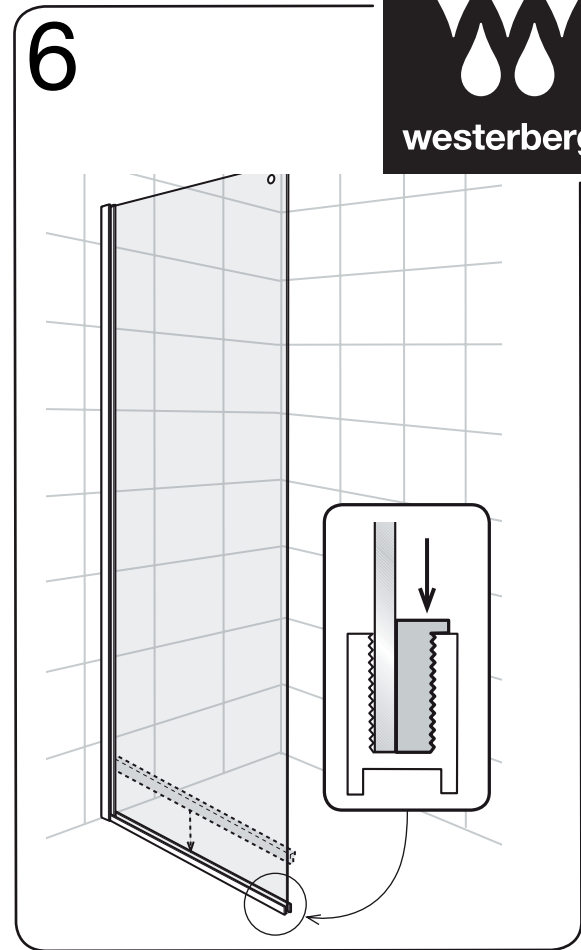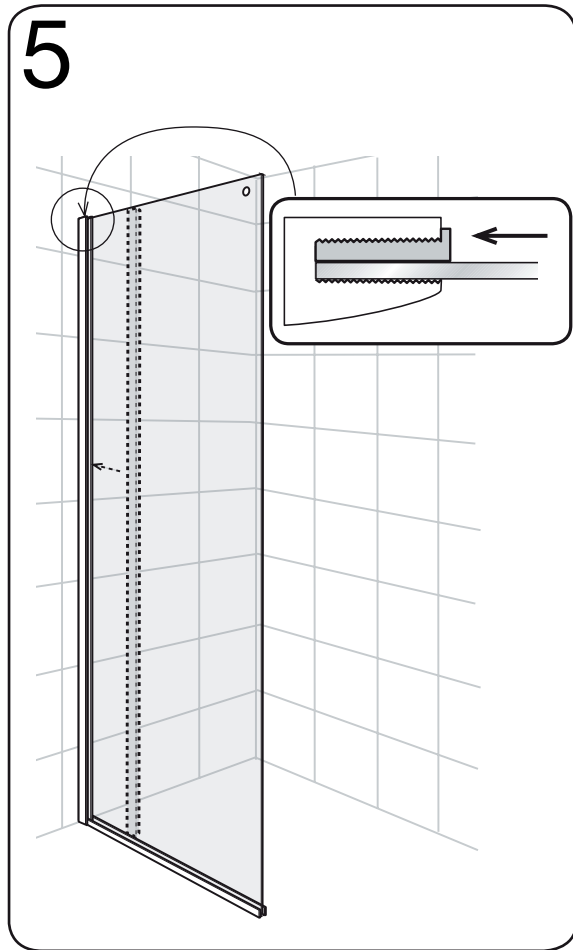


8

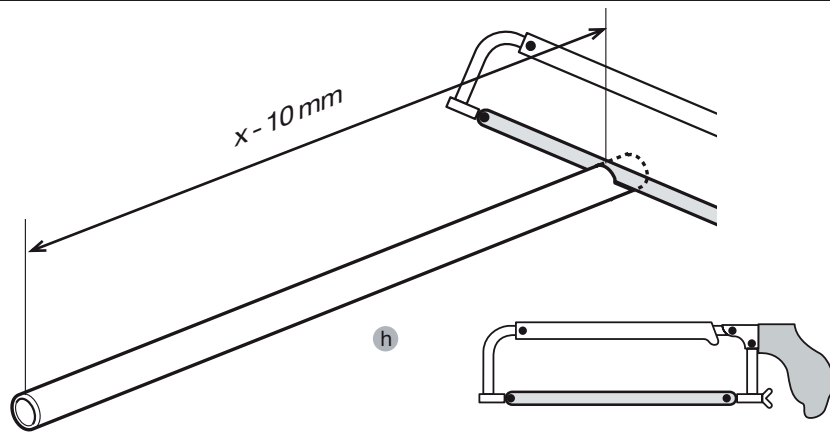


9

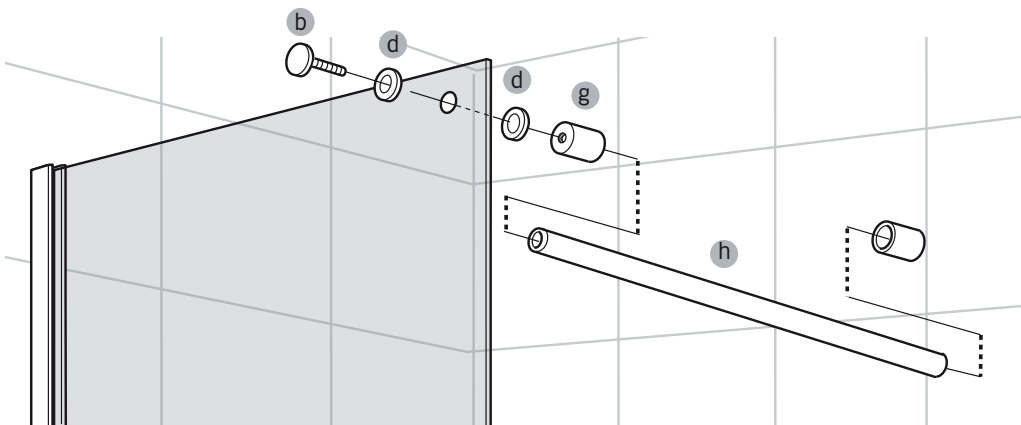


10

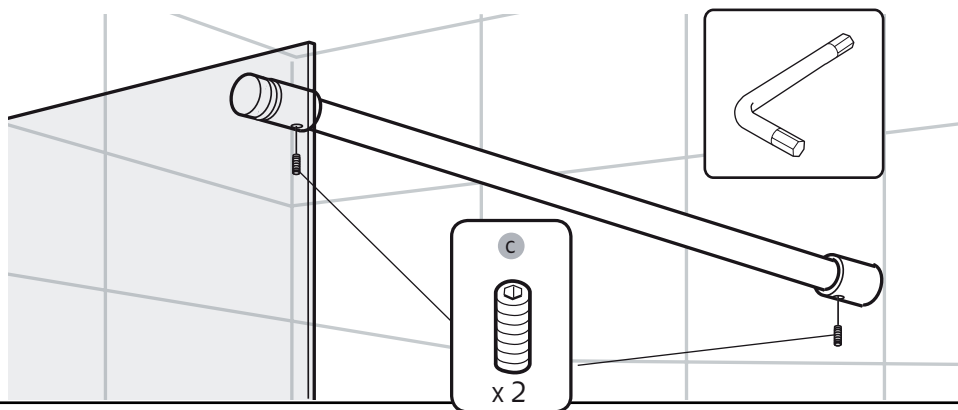

11


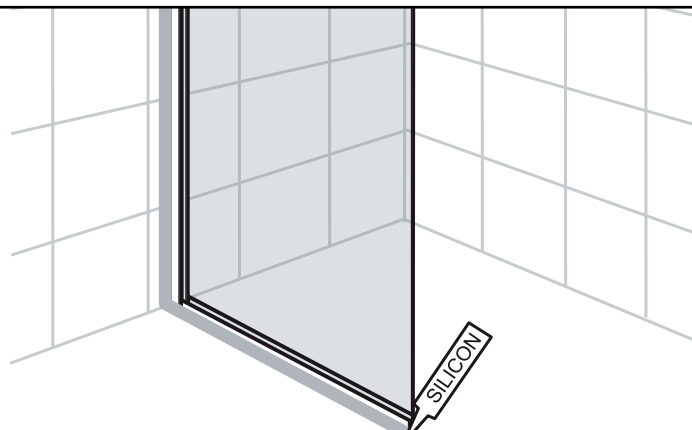


i

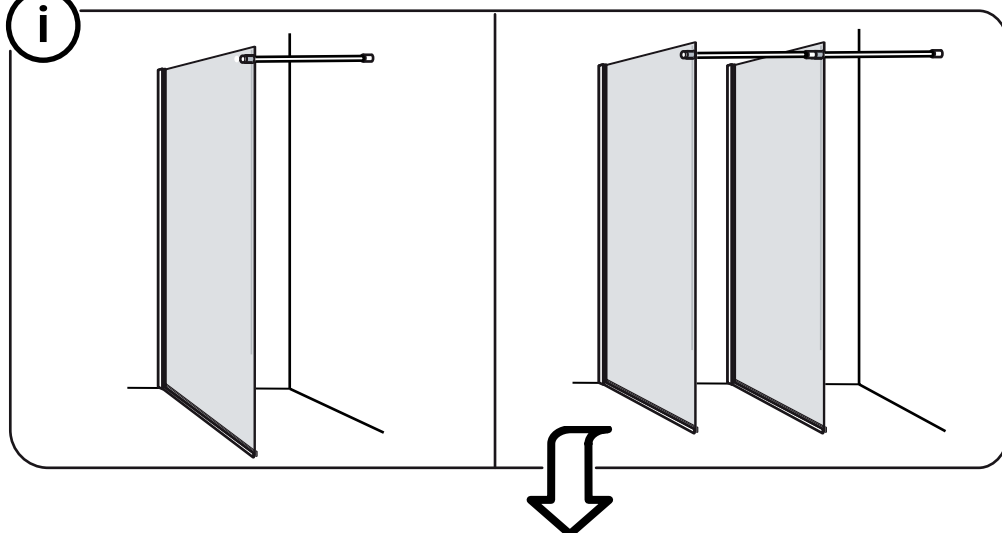

12

To connect more Clear 800/900 in same size, repeat Step 1-6, and do following:

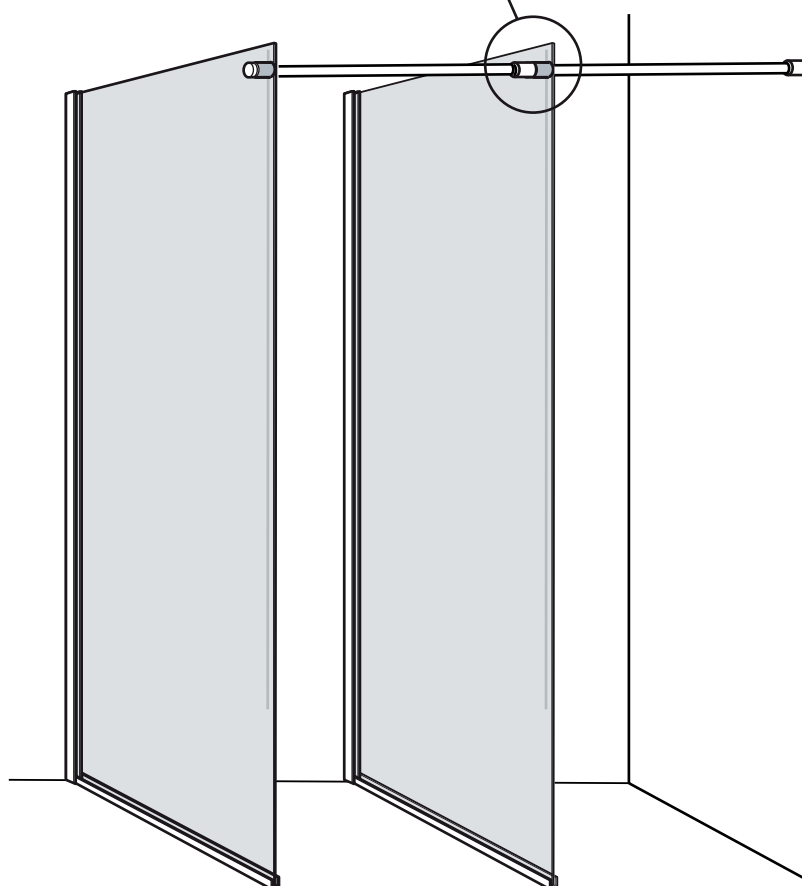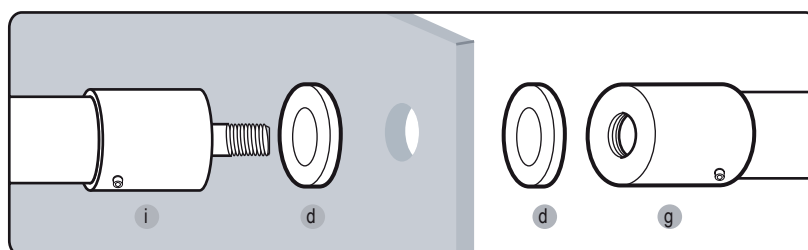





Fältspatsvägen 1, Skene Skog, SE-711 91 Skene, Sverige Postboks 154, N-1650 Seldebakk, Norge

Gammel Køge Landevej 84, Postboks 728, DK-2500 Valby Pohjoinen Rautatiekatu 15B, SF-00100 Helsingfors, Finland

westerbergs.com